



7. Drawings and schemes

List with the spare parts for BAS-650

Position	List of spare parts	Order no.	Qty of pcs used on 1 machine
1.	Frame		1
2.	Holder of the upper wheel	500-00-913	1
3.	Bounding ring	500-00-914	1
4.	Bushings	500-00-98	1
5.	Eccentric	500-00-915	1
6.	Lever	500-00-916	1
7.	Spring pad	500-00-917	1
8.	Spring	500-00-95	3
9.	Shaft	500-00-918	1
10.	Upper impeller wheel	500-00-73	1
11.	Impeller wheel of motor	500-00-919	1
12.	Rubber belt	500-00-80	2
13.	Protective strip	500-00-920	1
14.	Holder of pulley	500-00-114	2
15.	Screw		2
16.	Pad		4
17.	Bearing	500-00-100	2
18.	Pad		4
19.	Screw		2
20.	Screw		2
21.	"U" profile	500-00-921	1
22.	Holder	500-00-922	1
23.	Shoulder of the table	500-00-923	1
24.	Pad		1
25.	Cover engine	500-00-924	1
26.	Excentre	500-00-925	1
27.	Screw		1
28.	Bandsaw blade	500-00-59	1
29.	Ball bushing	500-00-79	2
30.	Guiding rod	500-00-78	1
31.	Bushing	500-00-926	2
32.	Bushing	500-00-97	2
33.	Pad	500-00-927	1
34.	Clamping clique	500-00-928	1
35.	Screw		1
36.	Locking pin BET		2
37.	Pad holder rulers	500-00-929	2
38.	"U" profile front	500-00-930	1
39.	Holder rulers	500-00-931	2

Position	List of spare parts	Order no.	Qty of pcs used on 1 machine
40.	Ruler	500-00-932	1
41.	Locking plate	500-00-933	1
42.	Screw		
43.	Upper cover	500-00-934	1
44.	Bottom cover	500-00-935	1
45.	Connecting profile	500-00-936	1
46.	Rivet		6
47.	Rivet	500-00-937	2
48.	Fork	500-00-264	2
49.	Safety profile	500-00-938	1
50.	Rubber stopper	500-00-34	2
51.	Handles	500-00-87	2
52.	Arresting	500-00-33	1
53.	Switch	500-00-108	1
54.	Screw		4
55.	Pad		4
56.	Pad		2
57.	Locking pin		2
58.	Motor with gearbox	500-00-106	1
59.	Screw		4
60.	Pad		4
61.	Nut		4
62.	Screw		2
63.	Pad		2
64.	Screw		2
65.	Screw		2
66.	Pad		2
67.	Nut		2
68.	Screw		2
69.	Pad		2
70.	Protective pad		2
71.	Grommet		1
72.	Screw		6
73.	Pad		1
74.	Screw		1
75.	Nut		1
76.	Screw		1
77.	Nut		2
78.	Screw		2
79.	Nut		2
80.	Pad		2

Position	List of spare parts	Order no.	Qty of pcs used on 1 machine
81.	Limit switch		2
82.	Table of the Band saw	500-00-939	1
83.	Screw		2
84.	Pad		2
85.	Screw		1
86.	Nut		1
87.	Pad		1
88.	Screw		4
89.	Pad		4
90.	Bearings	500-00-101	4
91.	Nut		1
92.	Screw square		1
93.	Pad		1
94.	Clique	500-00-88	1
95.	Screw		2
96.	Pad		2
97.	Screw adjusting the blade	500-00-89	1
98.	Clamping clique	500-00-113	1
99.	Pad		1
100.	Pad		1
101.	Locking pin		1
102.	Lifting eye		1
103.	Bearing	500-00-102	2
104.	Locking pad		2
105.	Locking pad		1
106.	Locking pin		2
107.	Screw		4
108.	Pad		4
109.	Nut		4
110.	Screw		2
111.	Pad		2
112.	Nut		2
113.	Screw		4
114.	Pad		4
115.	Grommet		4
116.	Transport wheel	500-00-83	2
117.	Holder protractor	500-00-14	1
118.	Protractor	500-00-15	1