


AGT1300i


FIG.1 CRANKCASE./COVER SUBASSEMBLY, CRANKCASE. (E01)

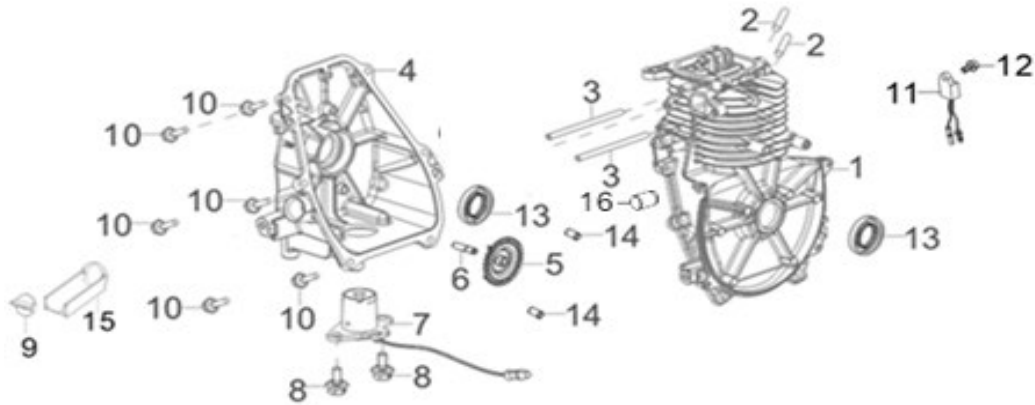

REF.NO.	PART NO	DESCRIPTION	Q'TY
E01-1	11310-Z900110-00A0	CRANKCASE SUBASSEMBLY.	1
E01-2	90204-Z800210-00A0	STUD BOLT	2
E01-3	90204-Z900110-00A0	STUD BOLT	2
E01-4	11411-Z900110-00A0	COVER, CRANKCASE	1
E01-5	15041-Z900110-00A0	OIL CHURNING GEAR	1
E01-6	15042HZ900110-00A0	OIL CHURNING GEAR SPINDLE	1
E01-7	37060-Z900110-00A0	SENSOR, ENGINE OIL	1
E01-8	90001-0612-01A0	BOLT	2
E01-9	15030-Z010130-Q5A0	PLUG SUBASSEMBLY, ENGINE OIL	1
E01-10	90001-0620-01A0	BOLT	6
E01-11	37050-Z900110-00A0	PROTECTOR, OIL	1
E01-12	90001-0610-01A0	BOLT	1
E01-13	90682-Z900110-00A0	SEAL, OIL	2
E01-14	90502-0814-00A0	POSITION PIN	2
E01-15	30431-Y9T0110-00A0	JACKET, RUBBER	1
E01-16	90722-Z2R0110-00A0	PLUG, END	1


AGT1300i

FIG.2 HEAD SUBASSEMBLY, CYLINDER / PLUG,SPARK (E03)

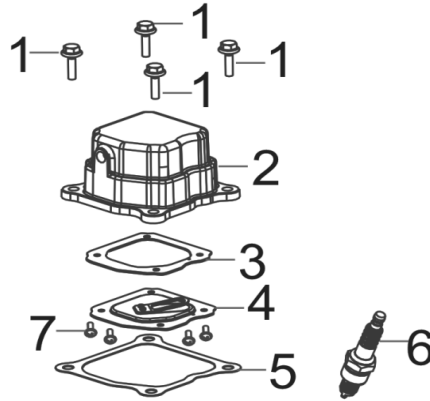

REF.NO.	PART NO	DESCRIPTION	Q'TY
E03-1	90007-0516-A1A0	BOLT	4
E03-2	12410-Z900110-00A0	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-3	11332-Z900110-00A0	GASKET, BREATH GROOVE	1
E03-4	11320-Z900110-00A0	STOP ENGINE PIECE SUBASSEMBLY	1
E03-5	12004-Z900110-00A0	CYLINDER HEAD COVER GASKET	1
E03-6	30010-Z350210-00A0	PLUG, SPARK	1
E03-7	90103-0308-51A0	CROSS-RECESSED PAN HEAD SCREW	4


FIG.3 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E04)

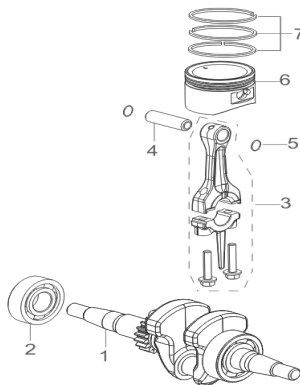

REF.NO.	PART NO	DESCRIPTION	Q'TY
E04-1	13300-Z900110-00A0	CRANKSHAFT ASSY.	1
E04-2	90547-0203-CLA0	DEEP GROOVE BALL BEARING	1
E04-3	13010-Z900110-00A0	ROD, CONNECTING	1
E04-4	13121-Z900110-00A0	PIN, PISTON	1
E04-5	13122-Z900110-00A0	CLIP, PISTON PIN	2
E04-6	13111-Z900120-00A0	PISTON	1
E04-7	13200-Z900110-00A0	RING ASSY, PISTON	1


AGT1300i

FIG.4 TRAIN, VALVE / CAMSHAFT SUBASSEMBLY (E06)

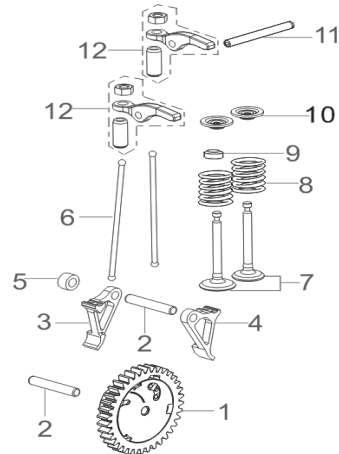

REF.NO.	PART NO	DESCRIPTION	Q'TY
E06-1	14200-Z900110-00A0	CAMSHAFT ASSY.	1
E06-2	14216-Z900110-00A0	SPINDLE, CAMSHAFT	2
E06-3	14341-Z900110-00A0	ROCKER, LOWER	1
E06-4	14341-Z900210-00A0	ROCKER, LOWER	1
E06-5	90683-Z900110-00A0	BUSH	1
E06-6	14070-Z900110-00A0	LIFTER SUBASSEMBLY, VALVE	2
E06-7	12110-Z900110-00A0	VALVES SET	1
E06-8	12103-Z900110-00A0	SPRING, VALVE	2
E06-9	12101-Z900110-00A0	GUIDE, SEAL	1
E06-10	12112-Z800110-00A0	SEAT, VALVE SPRING	2
E06-11	14330-Z900110-00A0	SHAFT, VALVE ROCKER	1
E06-12	14310-Z900110-00A0	ROCKER SUBASSEMBLY, VALVE	2


FIG.5 STARTER, RECOIL (E07)

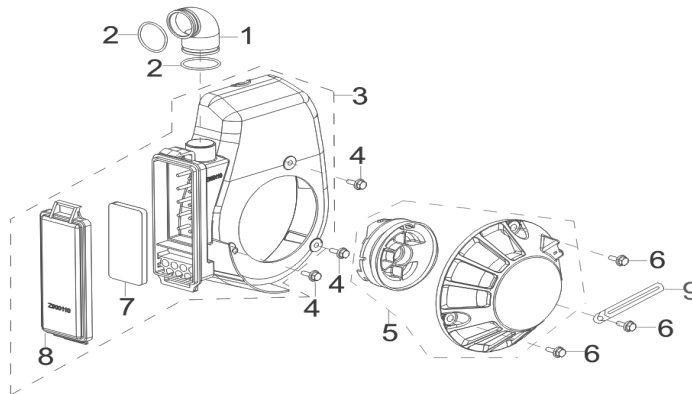

REF.NO.	PART NO	DESCRIPTION	Q'TY
E07-1	12510-Z900110-00A0	TUBE, INTAKE	1
E07-2	37073-Z900110-00A0		2
E07-3	28110-Z900110-Q2A0	SHROUD	1
E07-4	90007-0516-A1A0	HEXAGON SOCKET FLANGE FACE BOLT - BIG SERIES - GRADE B	3
E07-5	28200-Z900110-Q2A0	STARTER ASSY, RECOIL	1
E07-6	90007-0512-A1A0	HEXAGON SOCKET FLANGE FACE BOLT - BIG SERIES - GRADE B	3
E07-9	90684-Z030120-00A0	WIRE CLIP	1


AGT1300i

FIG.6 CARBURETOR ASSY. (E09)

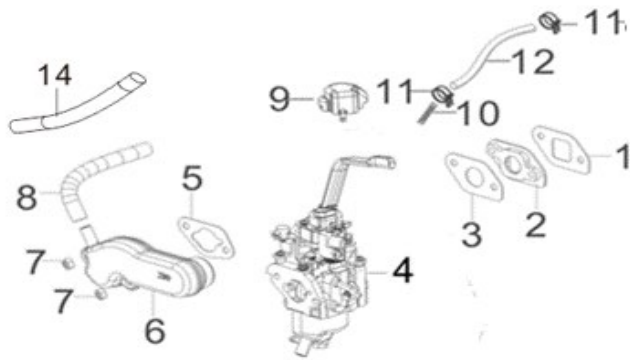

REF.NO.	PART NO	DESCRIPTION	Q'TY
E09-1	16001-Z900110-00A0	CARBURETOR SEAL GASKET	1
E09-2	16003-Z900110-00A0	PLATE, CARBURETOR INSULATOR	1
E09-3	16002-Z900110-00A0	GASKET, CARBURETOR INSULATOR	1
E09-4	16100-Z900810-00A0	CARBURETOR ASSY.	1
E09-5	17001-Z900210-00A0	AIR CLEANER SEAL GASKET	1
E09-6	17110-Z900120-00A0	AIR CLEANER INTAKE DUCT ASSEMBLY	1
E09-7	90305-0500-31A0	HEXAGON NUT WITH FLANGE	2
E09-8	17004-Z900110-00A0	TUBE, BREATHER	1
E09-9	14411-Y2V0110-00A0	CAP	1
E09-10	16652-Z800110-00A0	STRAINER, FUEL	1
E09-11	90685-D095-0EA0	PIPE CLAMP	2
E09-12	90686-YEB0111-00M0	TUBE, FUEL	1
E09-13	30431-Y020110-00A0	JACKET, RUBBER	1


FIG.7 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E10)

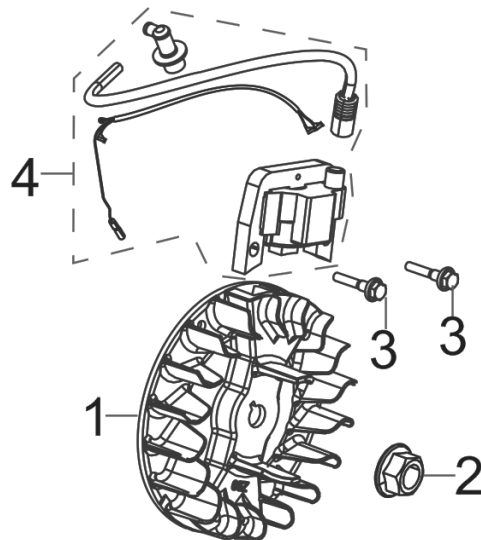

REF.NO.	PART NO	DESCRIPTION	Q'TY
E10-1	13510-Z900110-00A0	FLYWHEEL SUBASSEMBLY	1
E10-2	90306-1000-31A0	HEXAGON NUT WITH FLANGE	1
E10-3	90007-0520-A1A0	HEXAGON SOCKET FLANGE FACE BOLT - BIG SERIES - GRADE B	2
E10-4	30400-Z900110-00A0	COIL, IGNITION	1


AGT1300i

FIG.8 MUFFLER ASSY. (F02)

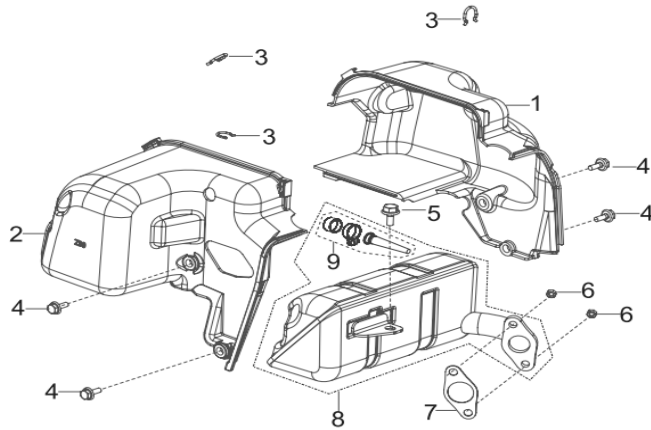

REF.NO.	PART NO	DESCRIPTION	Q'TY
F02-1	18109HZ900110-00A0	SHROUD, MUFFLER	1
F02-2	18109HZ900210-00A0	SHROUD, MUFFLER	1
F02-3	90740-Z900110-00A0	COLLAR	3
F02-4	90007-0516-A1A0	HEXAGON SOCKET FLANGE FACE BOLT - BIG SERIES - GRADE B	4
F02-5	90007-0612-A1A0	HEXAGON SOCKET FLANGE FACE BOLT - BIG SERIES - GRADE B	1
F02-6	90303-0600-31A0	HEXAGON NUT	2
F02-7	18001-Z800110-00A0	GASKET, EXHAUST OUTLET	1
F02-8	18100-Z900110-00A1	MUFFLER ASSY.	1


FIG.9 FUEL TANK (F03)

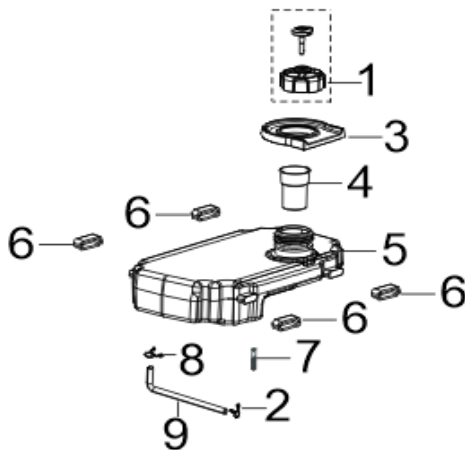

REF.NO.	PART NO	DESCRIPTION	Q'TY
F03-1	16730-Y2V0810-Q2A0	COVER, FUEL TANK	1
F03-2	90685-D080-0EA0	PIPE CLAMP	1
F03-3	16641-YEB0110-00A0	SLEEVE, FILLING OIL HOLE RUBBER	1
F03-4	16652-YDR0110-00A0	STRAINER, FUEL	1
F03-5	16620-YEB0110-Q2A0	FUEL TANK	1
F03-6	90683-Y2V0110-00A0	BUSH	4
F03-7	16514-Y2V0110-00A0	ELEMENT, STRAINER	1
F03-8	90685-D105-0EA0	PIPE CLAMP	1
F03-9	90686-YEB0210-00M0	TUBE, FUEL	1

AGT1300i


FIG.10 PANEL SUBASSEMBLY, CONTROL (F05)

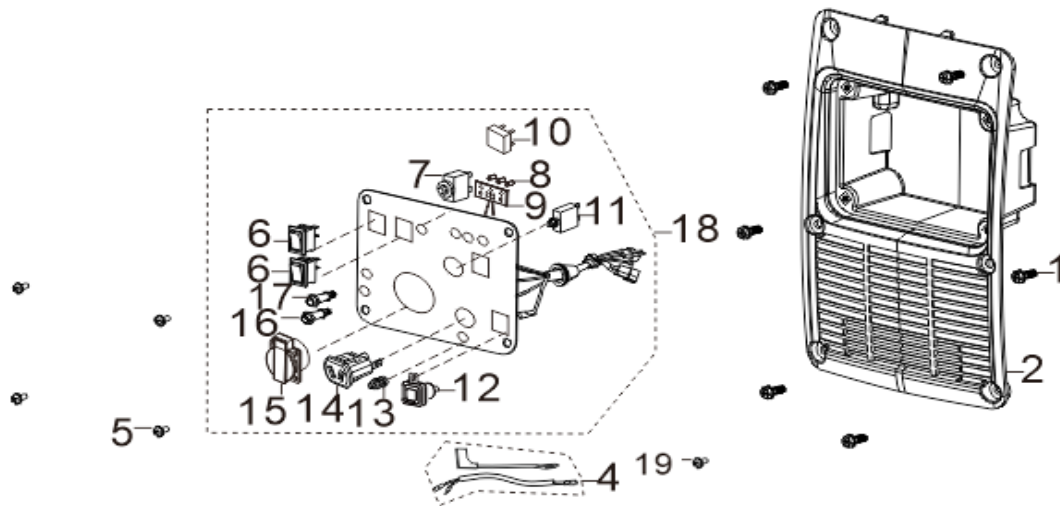

REF.NO.	PART NO	DESCRIPTION	Q'TY
F05-1	90208-YB00410-00A0	HEXAGONAL STEP BOLT	6
F05-2	35680-HYEB0111-Q2A0	SEAT, PANEL	1
F05-4	35660-YGE0210-00A0	HARNESS, CONTROL PANEL WIRING	1
F05-5	90255-0512-53A0		4
F05-6	35160-Y0G0110-0000	SWITCH SUBASSEMBLY	2
F05-7	35646-YB10110-0000	BUTTON, RESETTING	1
F05-8	35620-YAY0110-0000	STATUS DISPLAY BOARD ASSEMBLY	1
F05-9	37099-Y2V0210-0000	INDICATOR MOUNTING BASE	3
F05-10	35621-Y020110-0000	BRIDGE, RECTIFICATION	1
F05-11	31234-YAY0210-0000	PROTECTOR, OVERCURRENT	1
F05-12	35619-Y9T0110-0000	SOCKET SUBASSEMBLY, D.C	1
F05-13	35629-Y2V0110-0000	TERMINAL SUBASSEMBLY, GROUNDING	1
F05-14	35619-Y2V0110-0000	SOCKET SUBASSEMBLY, D.C	1
F05-15	35614-Y020110-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	1
F05-16	35614-Y2P0310-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	1
F05-17	35614-Y2P0210-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	1
F05-18	35610-YGE1210-H7A0	PANEL SUBASSEMBLY, CONTROL	1
F05-19	90103-Y9T0110-00A0	CROSS-RECESSED PAN HEAD SCREW	1

AGT1300i


图11 : ROTOR/STATOR (F06)

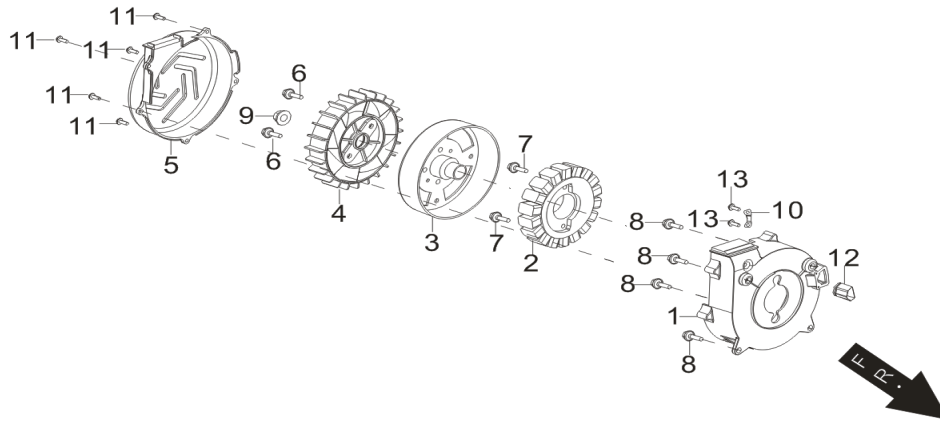

REF.NO.	PART NO	DESCRIPTION	Q'TY
F06-1	30024-Y9T0120-Q2A0	SHROUD, MOTOR	1
F06-2	30120-YGE0310-00A0	STATOR SUBASSEMBLY, MAGNETO	1
F06-3	30110-YEB0210-00A0	CASE SUBASSEMBLY, MAGNETO ROTOR	1
F06-4	19352-Y9T0110-Q2A0	IMPELLER	1
F06-5	28104-Y9T0110-Q2A0	COVER, SHROUD UPPER	1
F06-6	90001-0610-01A0	BOLT	2
F06-7	90001-0525-01A0	BOLT	2
F06-8	90007-0512-A1A0	BOLT	4
F06-9	90306-1000-31A0	HEXAGON NUT WITH FLANGE	1
F06-10	54066-Y9T0120-01A0	TENSION DISC	1
F06-11	90124-Y9T0510-00A0	SELF-TAPPING SCREW	5
F06-12	80155-Y9T0110-00A0	RUBBER SLEEVE	1
F06-13	90129-0310-01A0	CROSS-RECESSED COUNTERSUNK HEAD TAPPING SCREW	2

AGT1300i


FIG.12 (F31)

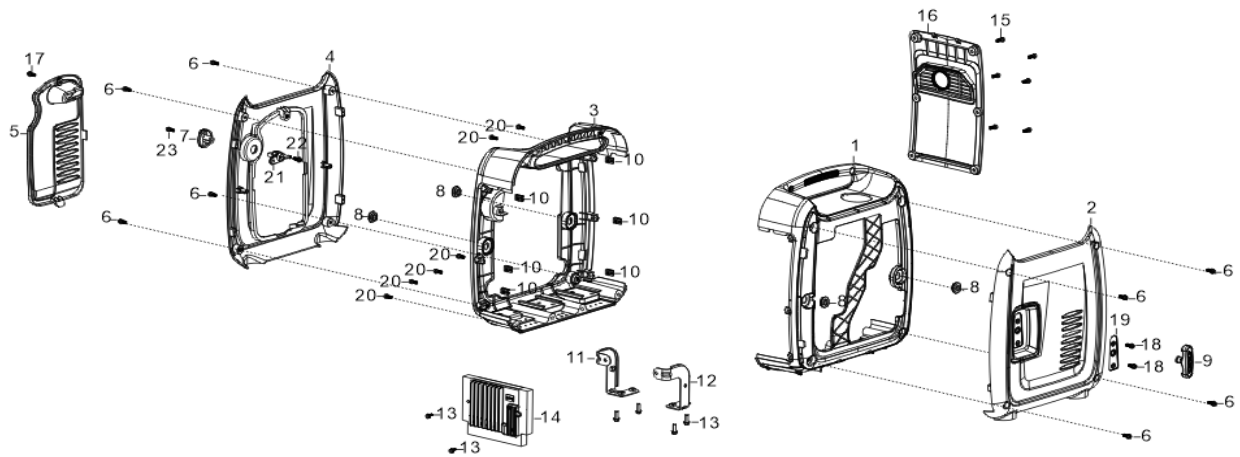

REF.NO.	PART NO	DESCRIPTION	Q'TY
F31-1	80095HYEB0110-Q2A0	RIGHT HOUSING	1
F31-2	80096HYEB0110-BXA0	RIGHT APPEARANCE COVER PLATE	1
F31-3	80091HYEB0110-Q2A0	LEFT HOUSING	1
F31-4	80092HYEB0110-BXA0	LEFT HOUSING COVER PLATE	1
F31-5	51196HYEB0110-BXA0	LEFT ACCESS DOOR	1
F31-6	90208-YB00210-00A0	HEXAGONAL STEP BOLT	8
F31-7	35643-Y2V0110-Q2A0	KNOB	1
F31-8	16601-Y2V0210-00A0	SLEEVE, FUEL TANK RUBBER	4
F31-9	28210-Y2V0110-00A0	HANDLE, RECOIL STRATER CABLE	1
F31-10	17199-YB00110-00A0	CLIP NUT	12
F31-11	30081-YEB0110-09A0	INVERTOR MOUNTING RACK	1
F31-12	30081-YEB0210-09A0	INVERTOR MOUNTING RACK	1
F31-13	90001-0614-01A0	BOLT	6
F31-14	30043-YGE0310-00A0	INVERTOR	1
F31-15	90208-YB00410-00A0	HEXAGONAL STEP BOLT	6
F31-16	18002HYEB0111-Q2A0	COVER, MUFFLER SIDE	1
F31-17	90135-YDM0110-00A0	CROSS HEXAGON HEAD PAN ANTI-REVERSAL BOLT	1
F31-18	90255-0512-53A0	CROSS-RECESSED SMALL PAN HEAD SCREW, SPRING WASHER AND FLAT WASHER ASSEMBLY	2
F31-19	28004-Y2V0210-00A0	GUIDE SUBASSEMBLY, STARTING ROPE	1
F31-20	90208-YB00210-00A0	HEXAGONAL STEP BOLT	6
F31-21	16750-Y2V0141-00A0	COCK ASSY, FUEL	1
F31-22	90007-0614-A1A0	BOLT	1
F31-23	90103-0416-51A0	CROSS-RECESSED PAN HEAD SCREW	1

AGT1300i

FIG.13 (F32)

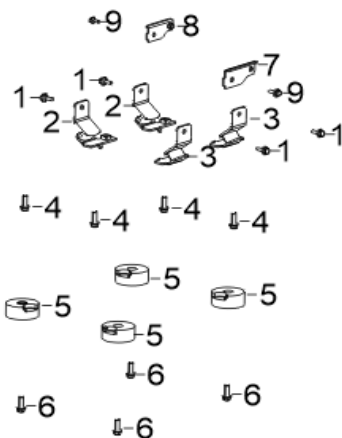

REF.NO.	PART NO	DESCRIPTION	Q'TY
F32-1	90001-0612-01A0	BOLT	4
F32-2	51009HY9T0110-00A0	CUSHION, ENGINE FRAME LEFT	2
F32-3	51011HY9T0110-00A0	CUSHION, ENGINE FRAME RIGHT	2
F32-4	90001-0612-01A0	BOLT	4
F32-5	51014-YEB0110-00A0	SEAT, ENGINE FRAME SHOCK ABSORPTION	4
F32-6	90001-0616-01A0	BOLT	4
F32-7	51124-Y9T0210-01A0	MOUNTING BRACKET	1
F32-8	51124-Y9T0110-01A0	MOUNTING BRACKET	1
F32-9	90001-0612-01A0	BOLT	2