


AGT2500i


FIG.1 CRANKCASE./COVER SUBASSEMBLY, CRANKCASE (E01)

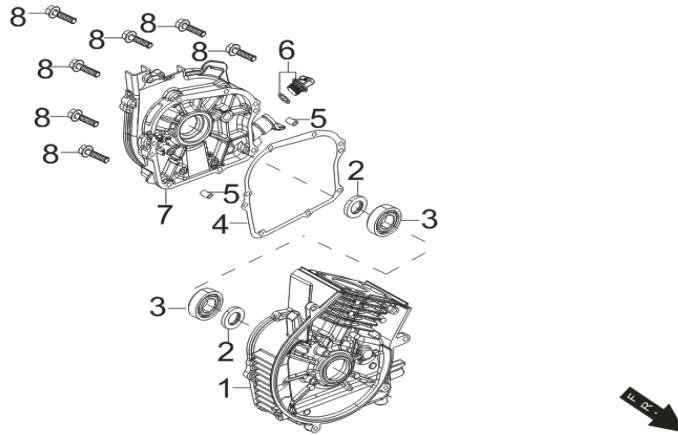

REF.NO.	PART NO	DESCRIPTION	Q'TY
E01-1	11310-Z800110-00A0	CRANKCASE SUBASSEMBLY.	1
E01-2	90682-Z800110-00A0	SEAL, OIL	2
E01-3	90547-0204-CLA0	DEEP GROOVE BALL BEARING	2
E01-4	11001-Z800110-00A0	GASKET, CRANKCASE	1
E01-5	90502-0812-00A0	POSITION PIN - TYPE A	2
E01-6	15010-Z800131-Q5A0	DIPSTICK SUBASSEMBLY, OIL	1
E01-7	11411-Z800210-00A0	COVER, CRANKCASE	1
E01-8	90007-0622-A1A1	BOLT	7

AGT2500i


FIG.2 HEAD SUBASSEMBLY, CYLINDER / PLUG, SPARK (E03)

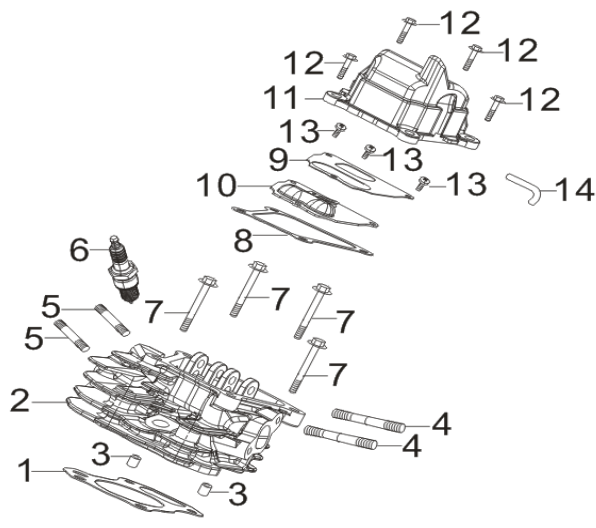

REF.NO.	PART NO	DESCRIPTION	Q'TY
E03-1	12131-Z800110-00A0	GASKET, CYLINDER HEAD	1
E03-2	12140-Z800110-00A0	HEAD SUBASSEMBLY, CYLINDER	1
E03-3	90502-0812-00A0	POSITION PIN	2
E03-4	90204-Z800110-00A0	STUD BOLT	2
E03-5	90204-Z800210-00A0	STUD BOLT	2
E03-6	30010-Z350210-00A0	PLUG, SPARK	1
E03-7	12003-Z800110-00A0	CYLINDER HEAD BOLT	4
E03-8	12004-Z800120-00A0	CYLINDER HEAD COVER GASKET	1
E03-9	11320-Z800110-00A0	STOP ENGINE PIECE SUBASSEMBLY	1
E03-10	11332-Z800110-00A0	GASKET, BREATH GROOVE	1
E03-11	12410-Z800210-00A0	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-12	90007-0616-A1A0	BOLT	4
E03-13	90103-0308-51A0	CROSS-RECESSED PAN HEAD SCREW	3
E03-14	17004-Z800110-00A0	TUBE, BREATHER	1


AGT2500i

FIG.3 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E05)

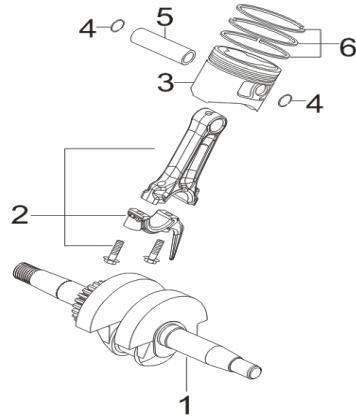

REF.NO.	PART NO	DESCRIPTION	Q'TY
E05-1	13300-Z800110-00A0	CRANKSHAFT ASSY.	1
E05-2	13010-Z800110-00A0	ROD, CONNECTING	1
E05-3	13111-Z800110-00A0	PISTON	1
E05-4	13122-Z800120-00A0	CLIP, PISTON PIN	2
E05-5	13121-Z800120-00A0	PIN, PISTON	1
E05-6	13200-Z800110-00A0	RING ASSY, PISTON	1


FIG.4 TRAIN,VALVE / CAMSHAFT SUBASSEMBLY (E06)

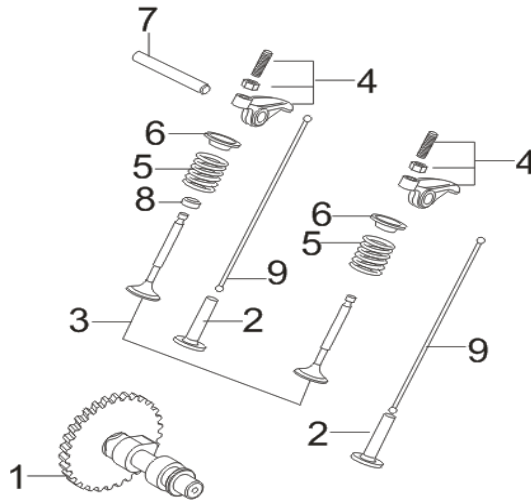

REF.NO.	PART NO	DESCRIPTION	Q'TY
E06-1	14200-Z800110-00A0	CAMSHAFT ASSY.	1
E06-2	14081-Z800110-00A0	TAPPET, VALVE	2
E06-3	12110-Z800110-00A0	VALVES SET	1
E06-4	14310-Z800110-00A0	ROCKER SUBASSEMBLY, VALVE	2
E06-5	12103-Z800110-00A0	SPRING, VALVE	2
E06-6	12112-Z800110-00A0	SEAT, VALVE SPRING	2
E06-7	14330-Z800110-00A0	SHAFT, VALVE ROCKER	1
E06-8	12101-Z800110-00A0	GUIDE, SEAL	1
E06-9	14070-Z800110-00A0	LIFTER SUBASSEMBLY, VALVE	2


AGT2500i

FIG.5 STARTER,RECOIL (E07)

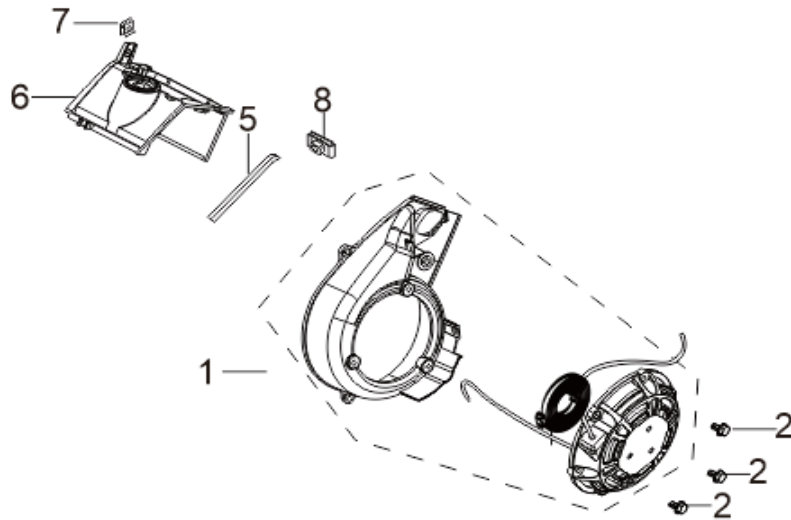

REF.NO.	PART NO	DESCRIPTION	Q'TY
E08-1	28100-Z800120-01A0	MANUAL STARTING ASSEMBLY	1
E08-2	90001-0612-01A0	BOLT	3
E08-5	19081-Z800110-00A0	STRIP, SHROUD SEAL	1
E08-6	12014-Z800110-00A0	CYLINDER HEAD WIND DEFLECTOR	1
E08-7	90804-Z800210-00A0	STOP DETENT	1
E08-8	17199-Y2V0110-00A0	CLIP NUT	1


FIG.6 CARBURETOR ASSY. (E09)

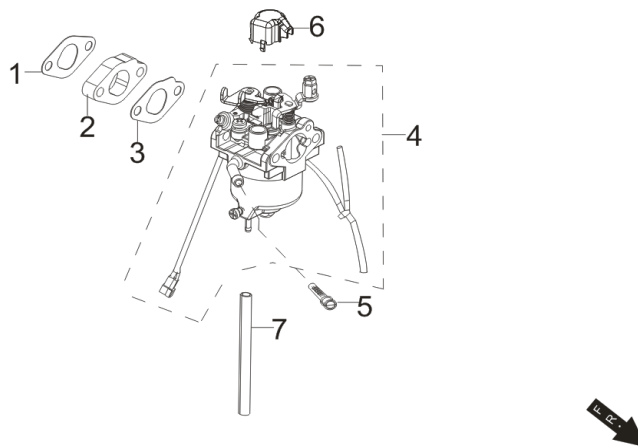

REF.NO.	PART NO	DESCRIPTION	Q'TY
E09-1	16001-Z800110-00A0		1
E09-2	16003-Z800110-00A0	PLATE, CARBURETOR INSULATOR	1
E09-3	16002-Z800110-00A0	GASKET, CARBURETOR INSULATOR	1
E09-4	16100-Z800110-00A1	CARBURETOR ASSY.	1
E09-5	16652-Z800110-00A0	STRAINER, FUEL	1
E09-6	14411-Y2V0110-00A0	CAP	1
E09-7	90686-Y2V0210-00A0	TUBE, FUEL	1

AGT2500i


FIG.7 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E10)

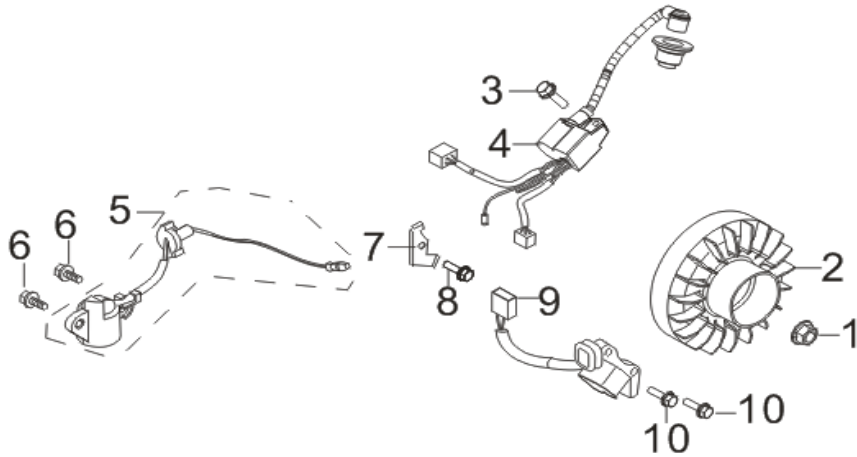

REF.NO.	PART NO	DESCRIPTION	Q'TY
E10-1	13501-Z510110-00A0	NUT, FLYWHEEL	1
E10-2	13510-Z800410-00A0	FLYWHEEL SUBASSEMBLY	1
E10-3	90007-0620-A1A0	BOLT	1
E10-4	30700-Z800310-00A0	IGNITOR	1
E10-5	37060-Z800110-00A0	SENSOR, ENGINE OIL	1
E10-6	90007-0612-A1A0	BOLT	2
E10-7	54066-Z800110-00A0	TENSION DISC	1
E10-8	90007-0612-A1A0	BOLT	1
E10-9	30400-Z800210-00A0	COIL, IGNITION	1
E10-10	90007-0620-A1A0	BOLT	2

AGT2500i


FIG.8 CLEANER, AIR (F01)

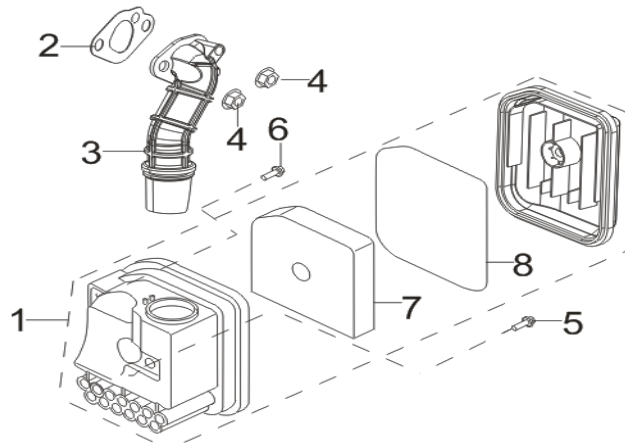

REF.NO.	PART NO	DESCRIPTION	Q'TY
F01-1	17100-Z800110-00A0	AIR CLEANER	1
F01-2	17001-Z800110-00A0	AIR CLEANER SEAL GASKET	1
F01-3	17110-Z800110-00A0	AIR CLEANER INTAKE DUCT ASSEMBLY	1
F01-4	90305-0600-31A0	HEXAGON NUT WITH FLANGE	2
F01-5	90007-0520-A1A0	BOLT	1
F01-6	90007-0620-A1A0	BOLT	1

AGT2500i


FIG.9 MUFFLER ASSY. (F02)

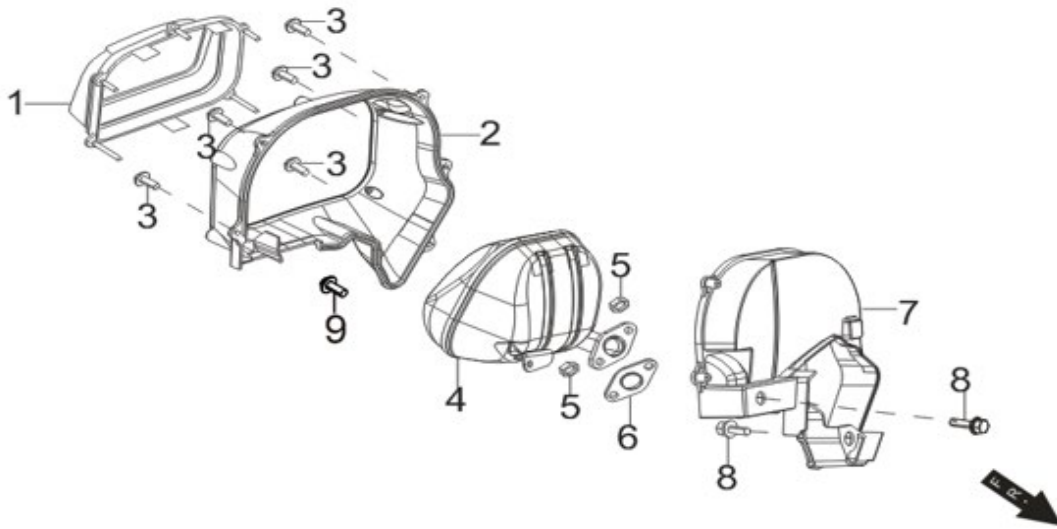

REF.NO.	PART NO	DESCRIPTION	Q'TY
F02-1	18002-Z800110-00A0	COVER, MUFFLER SIDE	1
F02-2	18109-Z800110-00A0	SHROUD, MUFFLER	1
F02-3	90107-0516-01A0	CROSS-RECESSED PAN HEAD SELF-TAPPING SCREW	5
F02-4	18100-Z800210-00A1	MUFFLER ASSY.	1
F02-5	90303-0600-31A0	HEXAGON NUT	2
F02-6	18001-Z800110-00A0	GASKET, EXHAUST OUTLET	1
F02-7	18013HZ800110-00A0	MUFFLER COVER	1
F02-8	90007-0616-A1A0	BOLT	2
F02-9	90104-0512-53A0	BOLT	1

AGT2500i


FIG.10 TANK ASSY, FUEL (F03)

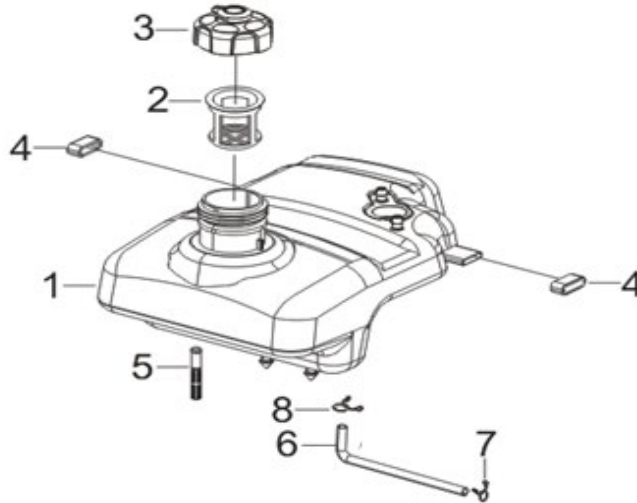

REF.NO.	PART NO	DESCRIPTION	Q'TY
F03-1	16620-Y2V0140-Q2A1	FUEL TANK	1
F03-2	16652-Y2V0110-00A0	STRAINER, FUEL	1
F03-3	16730-Y2V0610-Q2B0	COVER, FUEL TANK	1
F03-4	90683-Y2V0110-00A0	BUSH	2
F03-5	16514-Y2V0110-00A0	ELEMENT, STRAINER	1
F03-6	90686HY2V0410-00A0	TUBE, FUEL	1
F03-7	90740-Z010210-00A0	COLLAR	1
F03-8	90740-Z450110-00A0	COLLAR	1

AGT2500i


FIG.11 PANEL, CONTROL, ASSY.(F05)

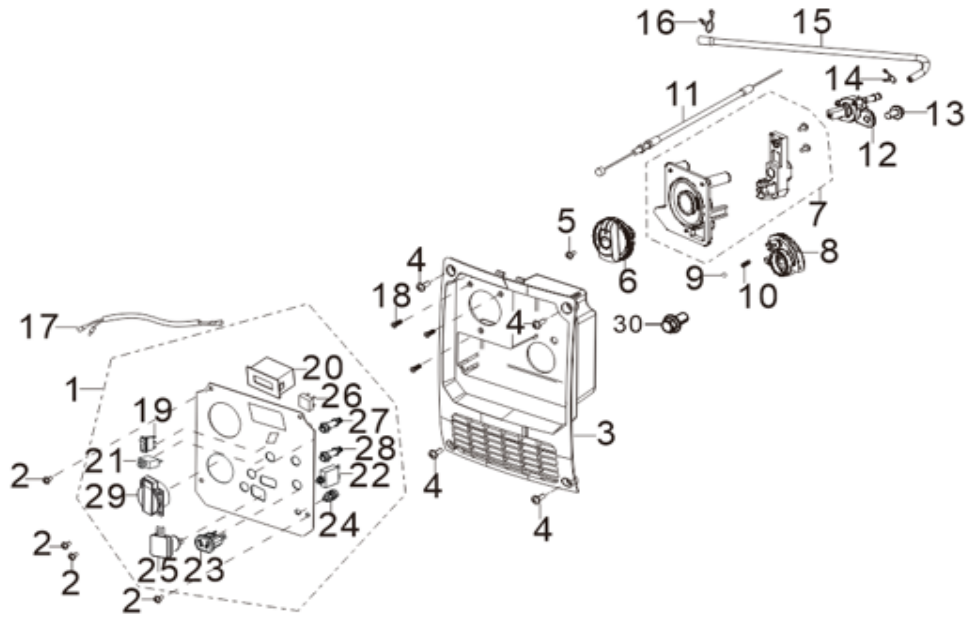

REF.NO.	PART NO	DESCRIPTION	Q'TY
F05-1	35610-Y2V1K10-H7A0	PANEL SUBASSEMBLY, CONTROL	1
F05-2	90124-Y9T0310-00A0	SELF-TAPPING SCREW	4
F05-3	35680-Y5V0110-Q2B0	SEAT, PANEL	1
F05-4	90255-0516-53A0		4
F05-5	90103-0416-51A0	CROSS-RECESSED PAN HEAD SCREW	1
F05-6	35643-Y2V0210-Q2B0	KNOB	1
F05-7	35160-YB00111-00A0	SWITCH SUBASSEMBLY	1
F05-8	94111-Y2V0410-00A0	COVER PLATE	1
F05-9	90543-0500-00A0	BALL, STEEL	1
F05-10	16527-Y2V0210-00A0	SPRING, STOPPER ADJUSTING	1
F05-11	16080-Y2V0110-00A0	HANDLE SUBASSEMBLY, CHOKE	1
F05-12	16750-Y2V0141-00A0	COCK ASSY, FUEL	1
F05-13	90001-0612-01A0	BOLT	1
F05-14	90740-Z010210-00A0	PIPE CLAMP	1
F05-15	90686HY2V0310-00A0	TUBE, FUEL	1
F05-16	90685-Z030510-00A0	PIPE CLAMP	1
F05-17	35660-Y2V1410-00A0	HARNESS, CONTROL PANEL WIRING	1
F05-18	90129-0416-01A0	CROSS-RECESSED COUNTERSUNK HEAD TAPPING SCREW	3
F05-19	35160-Y0G0110-0000	SWITCH SUBASSEMBLY	1
F05-20	35632-Y2V0110-0000	TIMER	3
F05-21	35646-YB10110-0000	BUTTON, RESETTING	1
F05-22	31234-Y9H0110-0000	PROTECTOR, OVERCURRENT	1
F05-23	35619-Y2V0110-0000	SOCKET SUBASSEMBLY, D.C	1
F05-24	35629-Y2V0110-0000	TERMINAL SUBASSEMBLY, GROUNDING	1
F05-25	35614-Y9T0110-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	2
F05-26	35621-Y020110-0000	BRIDGE, RECTIFICATION	1
F05-27	35614-Y2P0210-0000		1
F05-28	35614-Y2P0310-0000		1
F05-29	35614-Y020210-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	2
F05-30	90007-0614-A1A0	BOLT	1

AGT2500i


FIG.12 ROTOR/STATOR (F06)

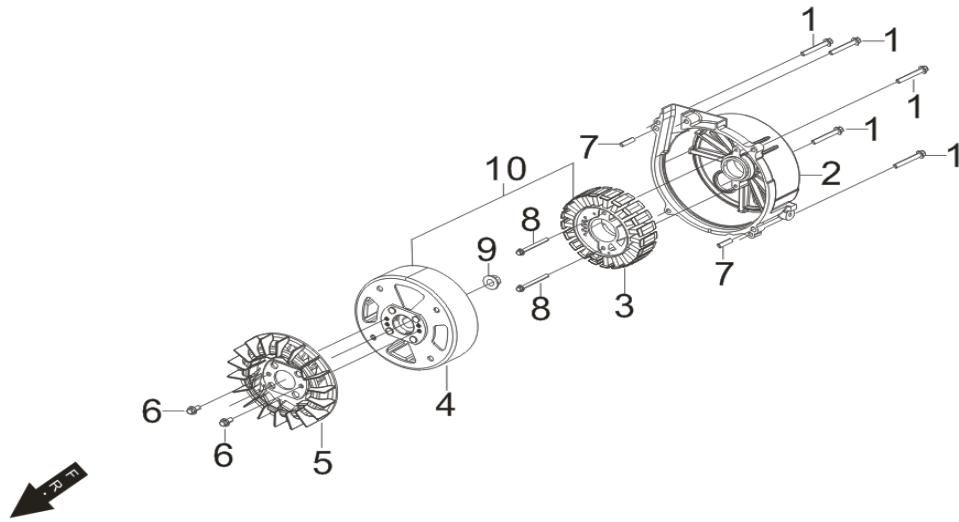

REF.NO.	PART NO	DESCRIPTION	Q'TY
F06-1	90001-0630-01A0	BOLT	5
F06-2	30024-Y2V0210-00A0	SHROUD, MOTOR	1
F06-3	30120-YC40110-00A1	STATOR SUBASSEMBLY, MAGNETO	1
F06-4	30110-Y2V0130-00A2	CASE SUBASSEMBLY, MAGNETO ROTOR	1
F06-5	19352-Y2V0110-Q2A0	IMPELLER	1
F06-6	90001-0610-01A0	BOLT	2
F06-7	90502-0814-00A0	POSITION PIN - TYPE A	2
F06-8	90001-0535-01A0	BOLT	2
F06-9	90306-1200-31A0	HEXAGON NUT WITH FLANGE	1

AGT2500i


FIG.13 SHELL (F31)

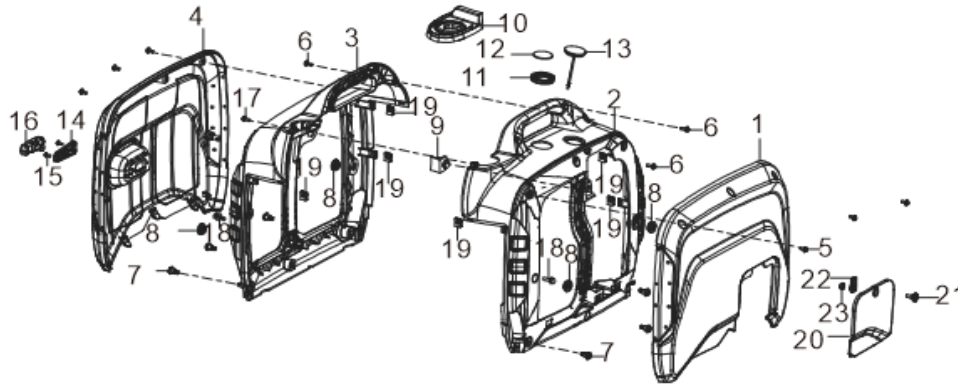

REF.NO.	PART NO	DESCRIPTION	Q'TY
F03-1	80096HY5V0210-BXB0	RIGHT APPEARANCE COVER PLATE	1
F03-2	80095-Y5V0120-Q2B0	RIGHT HOUSING	1
F03-3	80091-Y5V0120-Q2B0	LEFT HOUSING	1
F03-4	80092HY5V0210-BXB0	LEFT HOUSING COVER PLATE	1
F03-5	90208-YB00210-00A0	HEXAGONAL STEP BOLT	6
F03-6	90255-0516-53A0		3
F03-7	90208-Y2V0110-00A0	HEXAGONAL STEP BOLT	6
F03-8	16601-Y2V0210-00A0	SLEEVE, FUEL TANK RUBBER	4
F03-9	50033-Y2V0110-00A0	CUSHION, ENGINE UPPER SUSPENSION RUBBER	1
F03-10	16641-Y2V0110-00B0	SLEEVE, FILLING OIL HOLE RUBBER	1
F03-11	30431-Y2V0310-00A0	JACKET, RUBBER	1
F03-12	37205-Y2V0310-00B0	OPENING, OIL LEVERLER VIEW	1
F03-13	30431-Y2V0110-00B0	JACKET, RUBBER	1
F03-14	28004-YB00110-Q2A0	GUIDE SUBASSEMBLY, STARTING ROPE	1
F03-15	90255-0516-53A0	CROSS-RECESSED SMALL PAN HEAD SCREW, SPRING	2
F03-16	28210-Y2V0110-00A0	HANDLE, RECOIL STRATER CABLE	1
F03-17	90129-0416-01A0	CROSS-RECESSED COUNTERSUNK HEAD TAPPING SC	1
F03-18	90007-0612-A1A0	BOLT	2
F03-19	17199-Y2V0110-00A0	CLIP NUT	6
F03-20	51197HY5V0210-BXB0	RIGHT ACCESS DOOR	1
F03-21	90208-Y9T0120-00A0	HEXAGONAL STEP BOLT	1
F03-22	24329-Y9T0120-Q2A0	STOPPER	1
F03-23	90341-YA50110-00A0	NYLON NUT	1

AGT2500i

FIG.14 PLATE, BOTTOM/ASSEMBLING FRAME, INVERTER (F32)

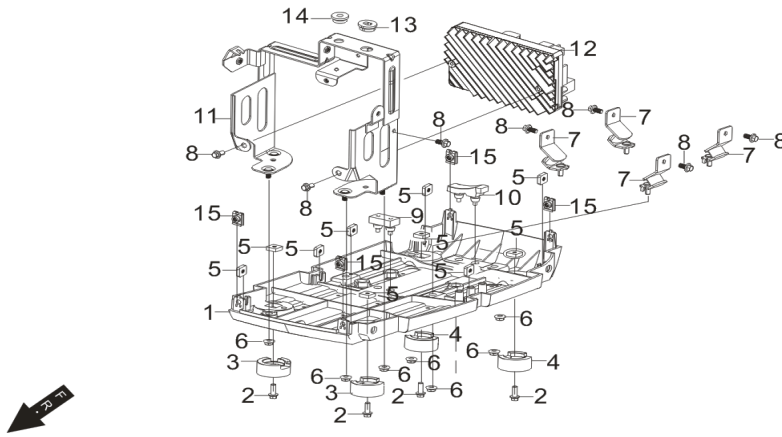

REF.NO.	PART NO	DESCRIPTION	Q'TY
F32-1	51143-Y5V0210-Q2B0	PLATE, BOTTOM	1
F32-2	90001-0614-01A0	BOLT	4
F32-3	51014-Y2V0140-00B0	SEAT, ENGINE FRAME SHOCK ABSORPTION	2
F32-4	51014-Y2V0250-00B0	SEAT, ENGINE FRAME SHOCK ABSORPTION	2
F32-5	90326-Y2V0110-00A0		10
F32-6	90305-0600-31A0	HEXAGON NUT WITH FLANGE	7
F32-7	51005-Y2V0110-00A0	CUSHION, ENGINE FRAME	4
F32-8	90001-0612-01A0	BOLT	7
F32-9	50035-Y2V0210-00A0	BUFFERING PAD SUPPORT	1
F32-10	50035-Y2V0110-00A0	BUFFERING PAD SUPPORT	1
F32-11	30081-Y2V0120-H7A0	INVERTOR MOUNTING RACK	1
F32-12	30043-Y2V2310-00A0	INVERTOR	1
F32-13	16601-Y2V0210-00A0	SLEEVE, FUEL TANK RUBBER	1
F32-14	16601-Y2V0110-00A0	SLEEVE, FUEL TANK RUBBER	1
F32-15	17199-Y2V0110-00A0	CLIP NUT	4