

13.3 Replacement parts list

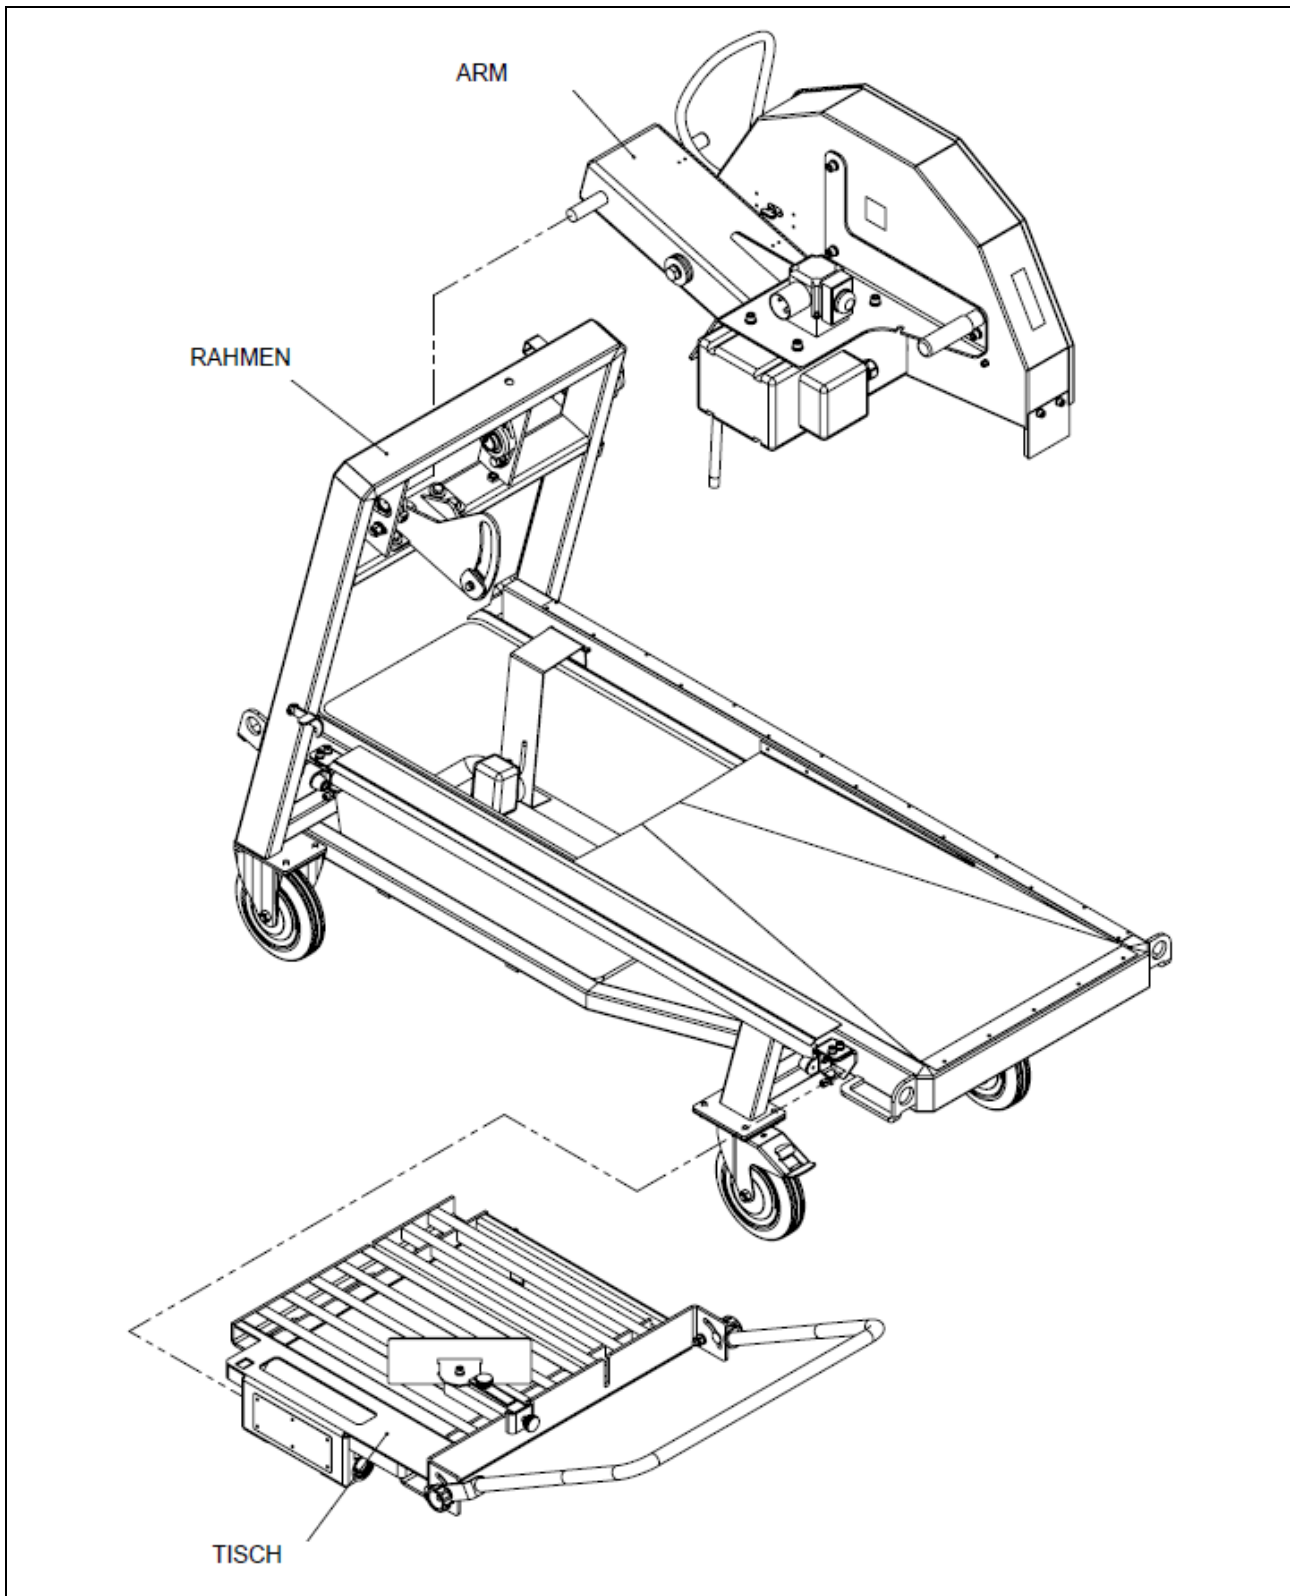


Figure 25: Replacement parts list

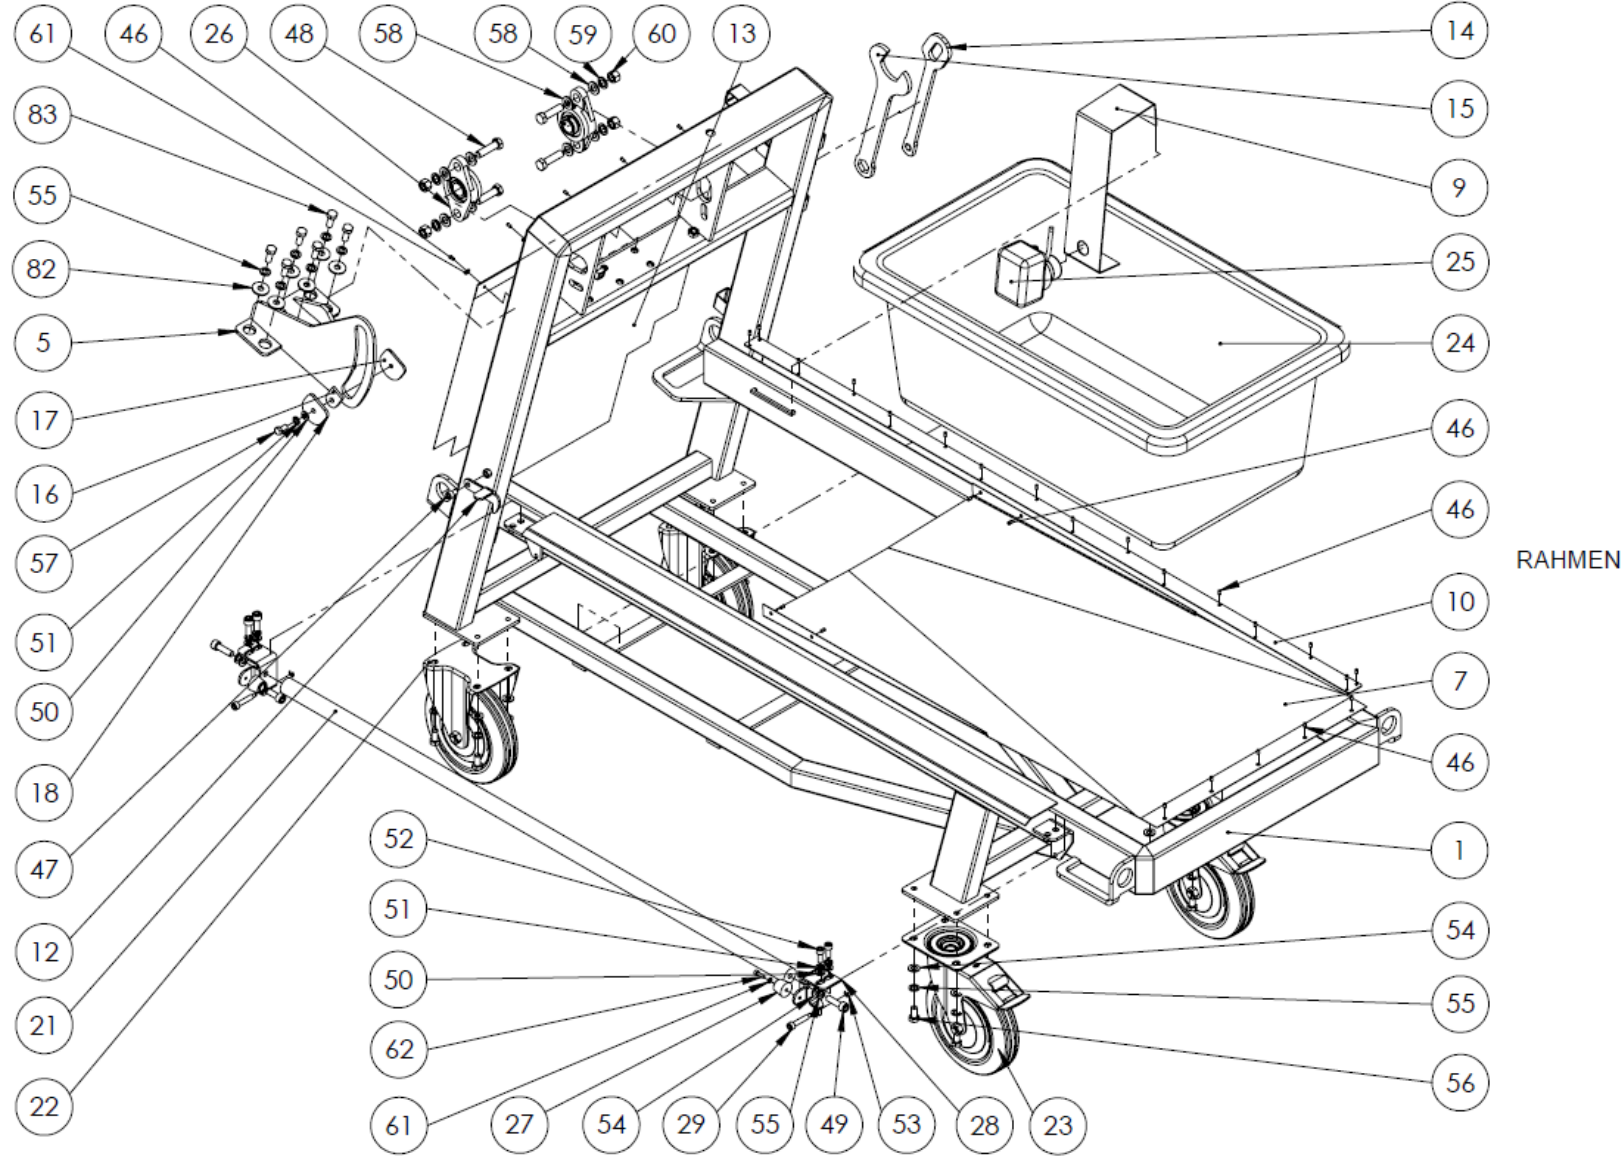


Figure 26: Replacement parts list

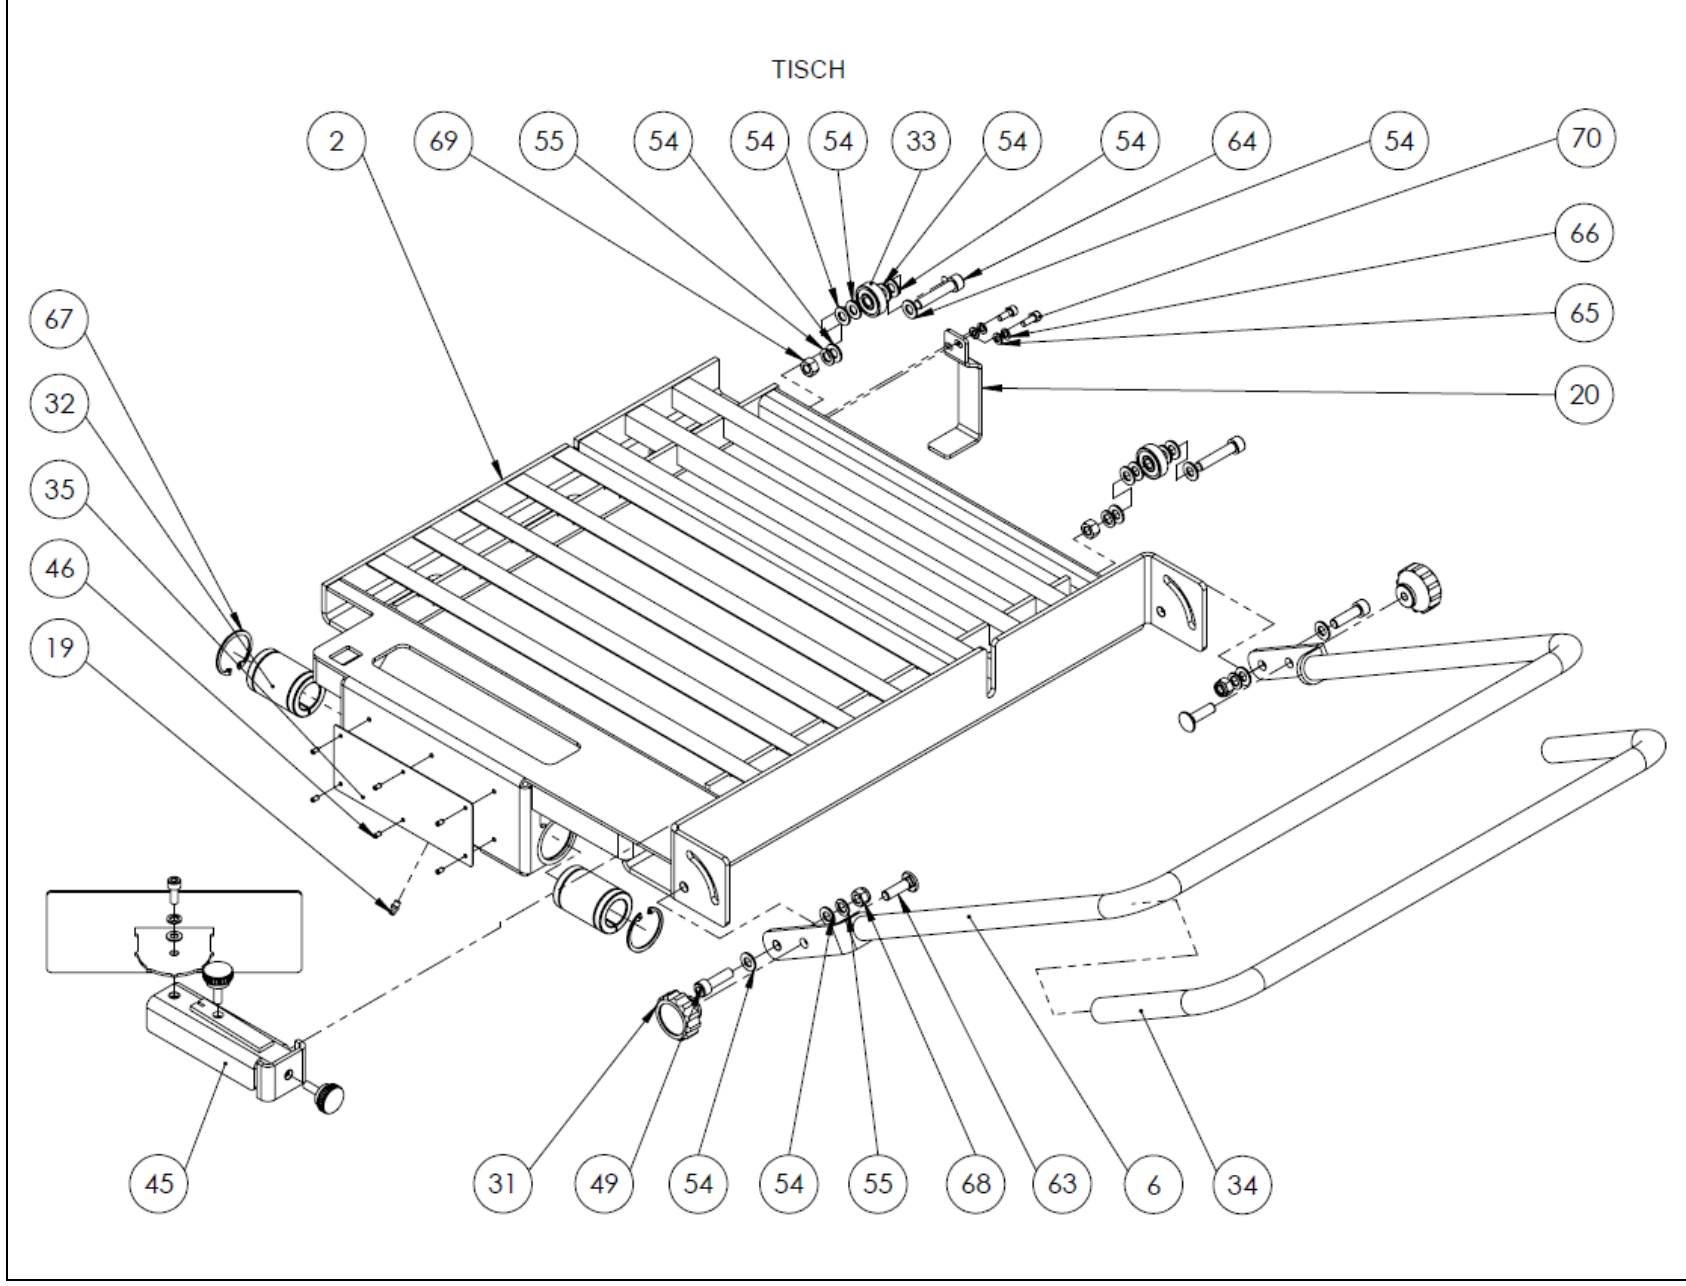


Figure 27: Replacement parts list

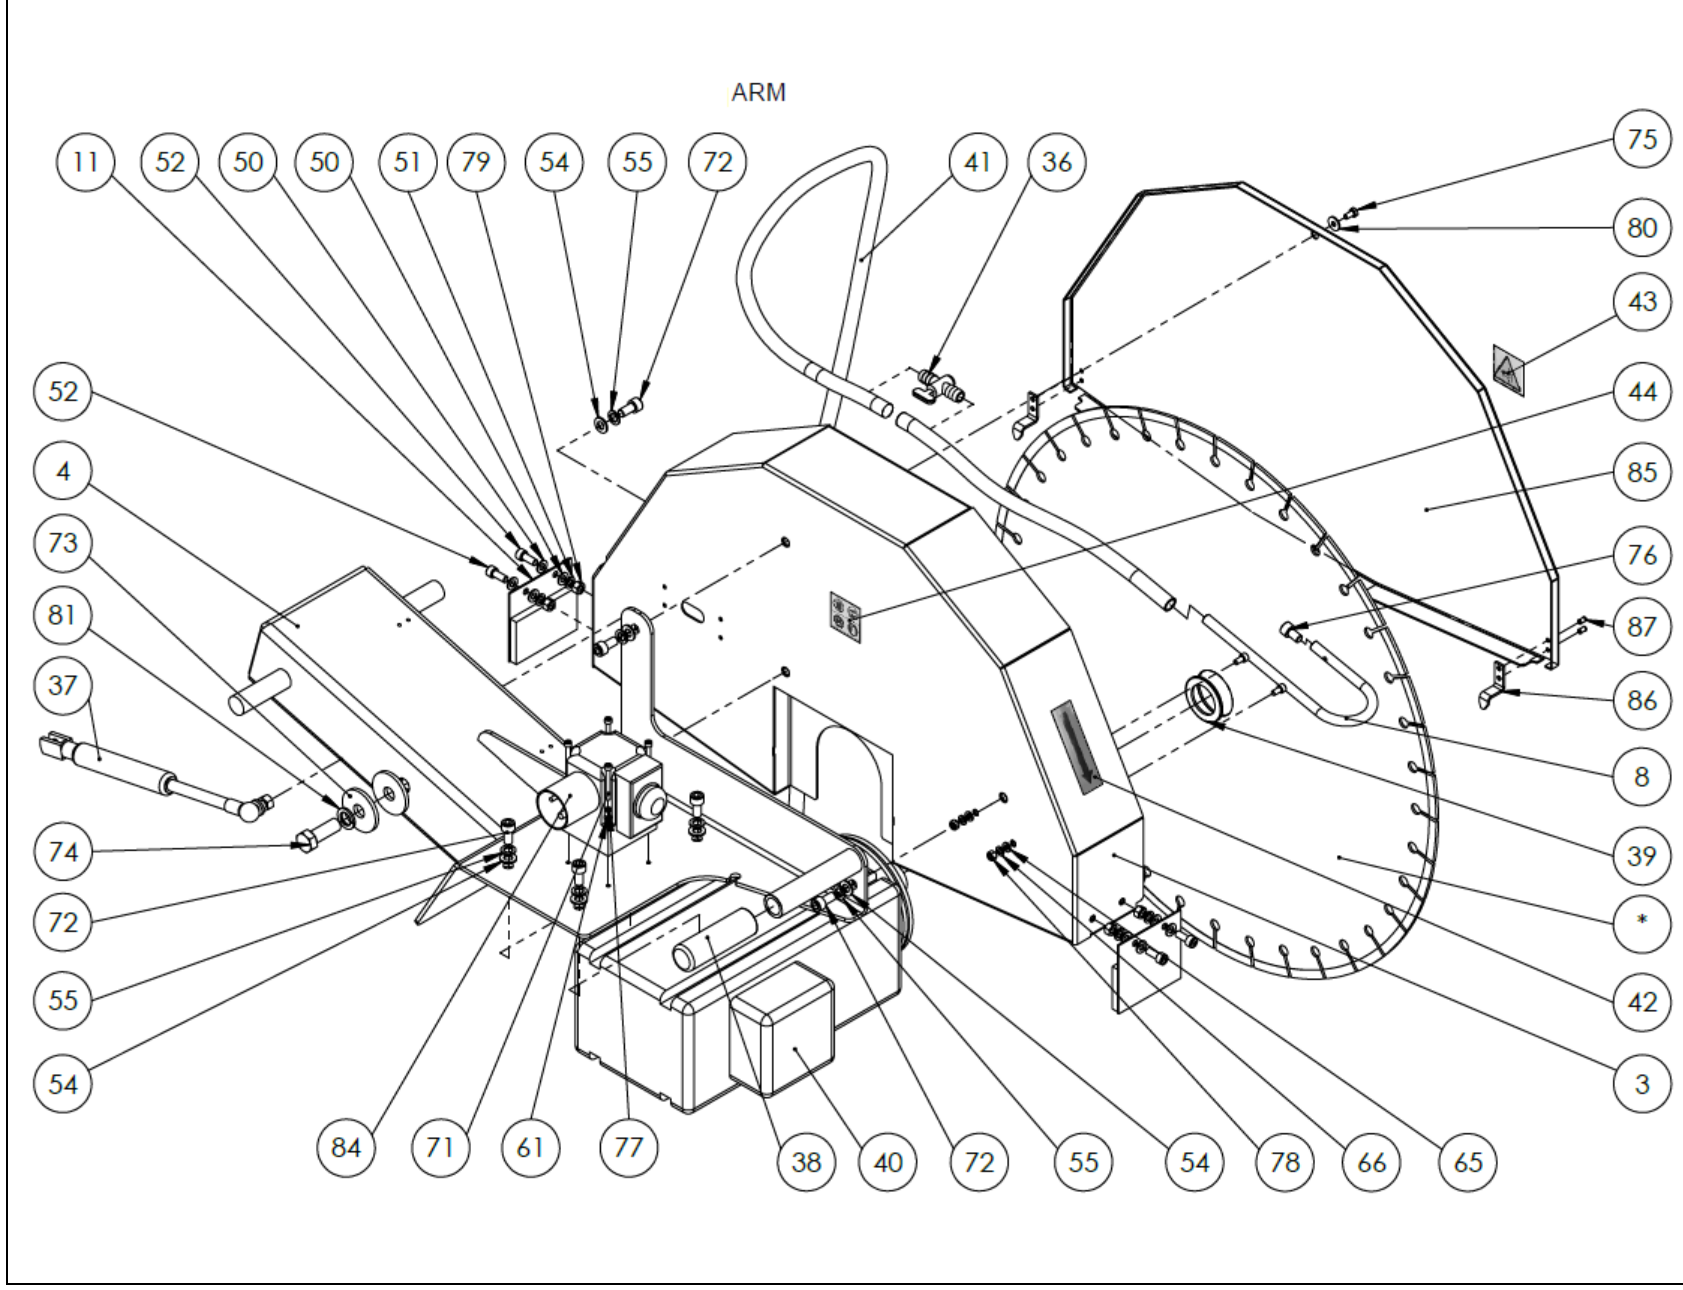


Figure 28: Replacement parts list

Item No.	Name	Item No.	Name
3	Disc cover	45	Protractor
4	Motor holder	46	Rivet 4X8
5	Console	47	Screw
6	Handle	48	Screw
7	Tank	49	Screw
8	Disc cooling	50	Washer 8.4
9	Pump holder	51	Spring washer 8
10	Sliding plate	52	Screw M10 x 35
11	Splash guard	53	Washer 8.4
12	Table lock	54	Spring washer 8
13	Apron	55	Screw M8 x 20
14	Spanner	56	Screw
15	Spanner	57	Screw
16	Limit stop	58	Washer
17	Limit stop 2	59	Spring Washer
18	Limit stop 3	60	Nut
19	Grease nipple	61	Washer 13
20	Hook	62	Washer 12
21	Guide bar	63	Nut M12
22	Fixed wheel	64	Washer 5.3
23	Rotating wheel	65	Washer
24	Drip tray	66	Screw M10x35
25	Pump	67	Sawing ring
26	Bearing	68	Washer 6.4
27	Rubber limit	69	Nut
28	Adjustment strap	70	Screw
29	Adjustment screw	71	Locking nut M10
30	Adjustment strap	72	Screw
31	Plastic nut	73	Washer
32	Ball bearing	74	Screw M5 x 45
33	Bearing	75	Screw M10 x 20
34	Heat-shrink tubing	76	Screw
35	Logo	77	Screw M16 x 45
36	Hose valve	78	Screw M6 x 12-WN
37	Gas pressure damper	79	Screw M10 x 16
38	Handle	80	Spring washer 5
39	Reducing ring D60/40	81	Spring washer 8
40	Motor	82	Nut M8
41	Coolant tube	83	Screw
42	Arrow sticker	84	Switch
43	Sticker	85	Protection cover
44	Sticker	86	Hook

Figure 29: Replacement parts list