


Ersatzteilliste

EBS 180.1

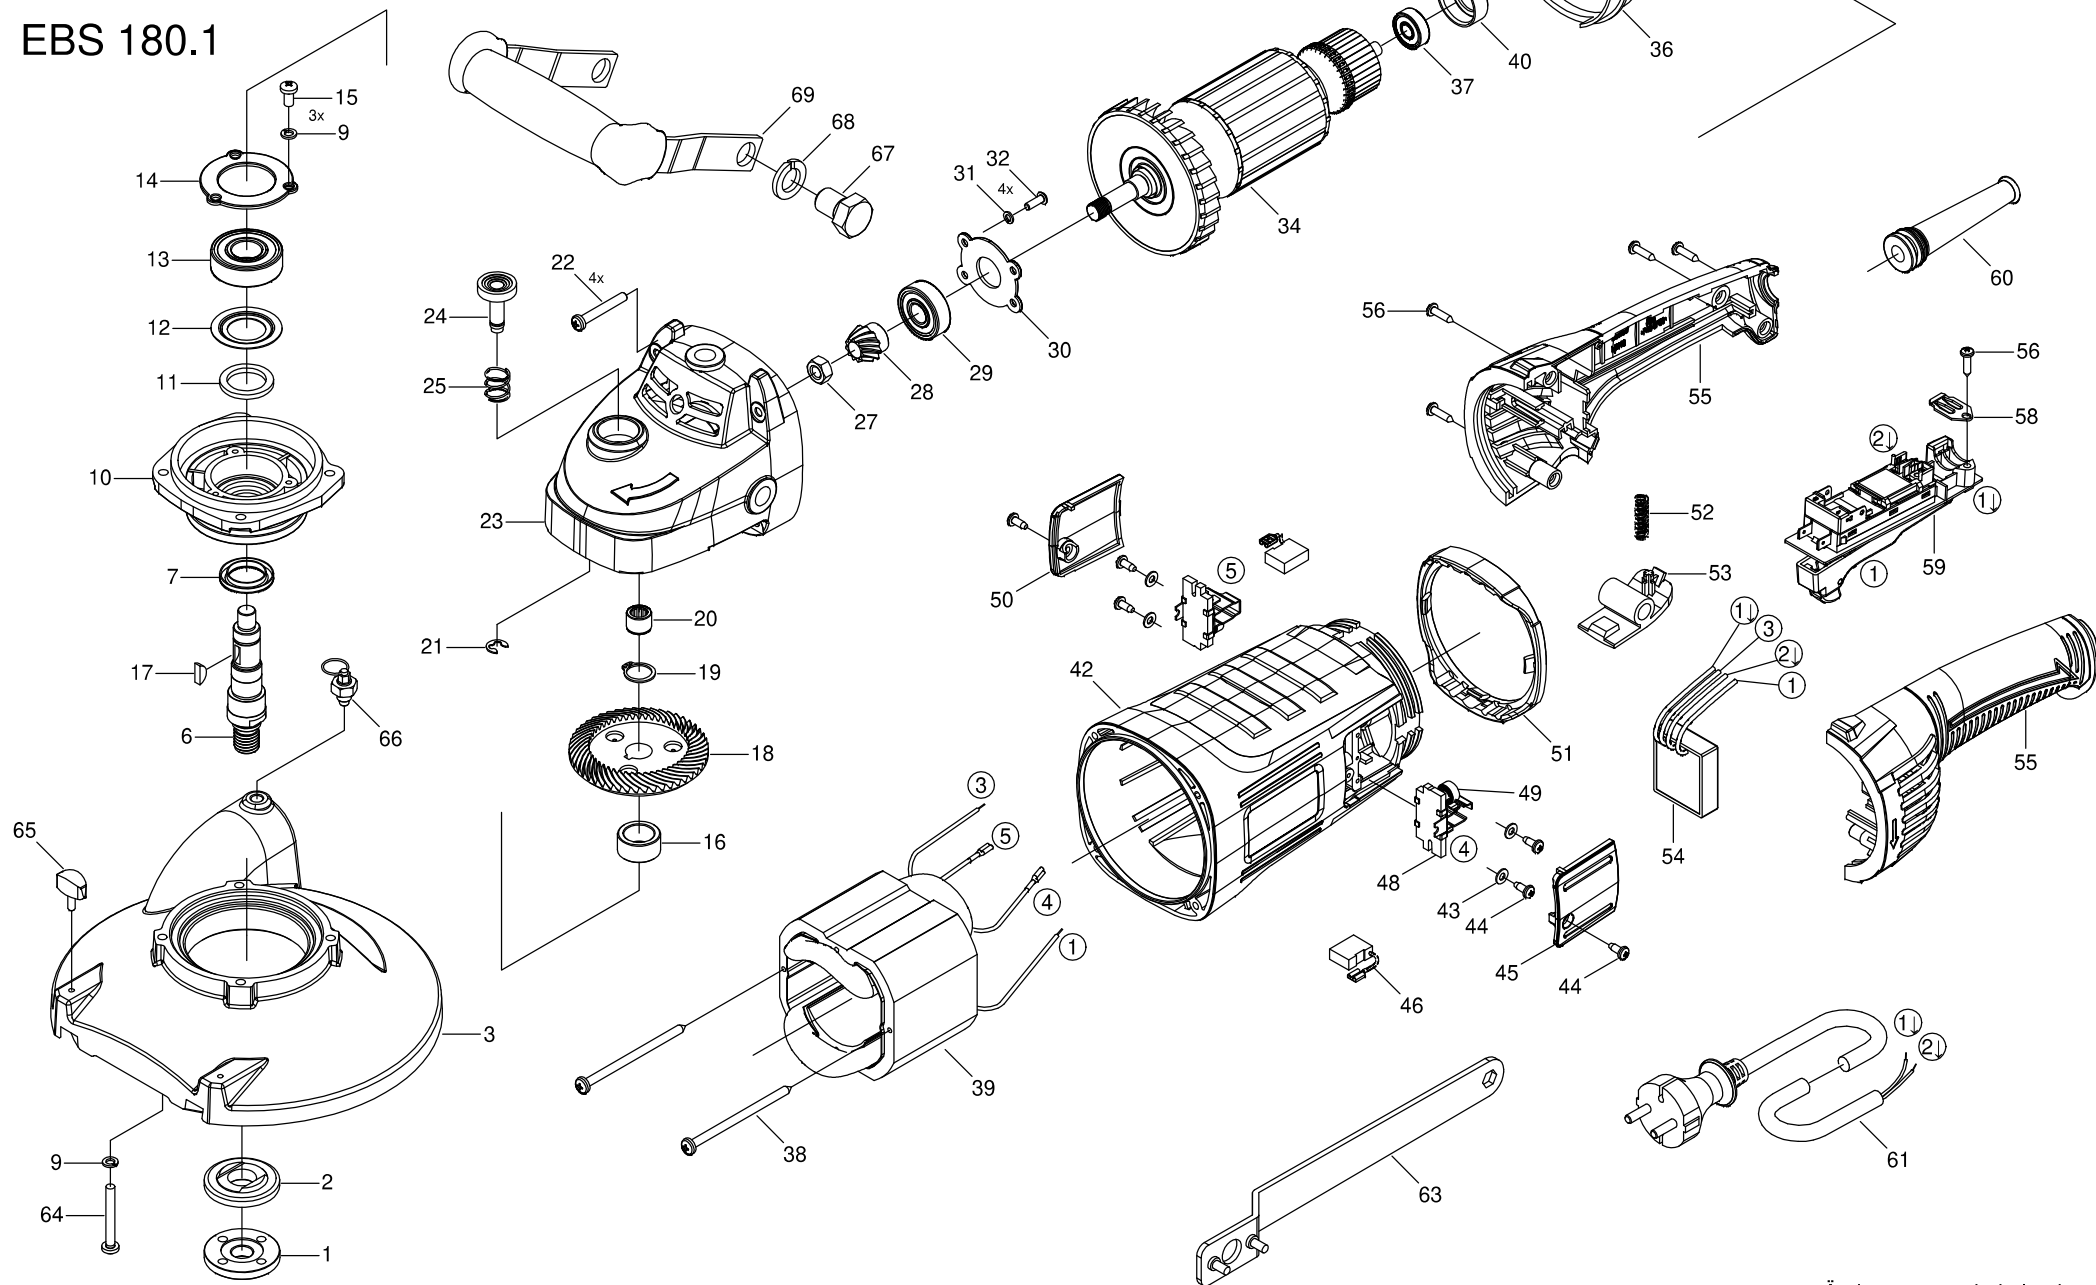

Änderungen vorbehalten!

**0634S000****EBS 180.1 - 230V**

Version

01

Dated: 03.03.2025

Pos.	Description	Item No.	pc.
1	Clamp nut	6634S001	1
2	Flange	6634S002	1
3	Suction hood	7634S575	1
6	Work spindle	6634S006	1
7	Dust protection ring	6634S007	1
9	Spring lock washer 5	80201302	7
10	Gearbox cover	6634S010	1
11	Felt ring	6634S011	1
12	Disc	6634S012	1
13	Grooved ball bearing 6203 2RS	80410130	1
14	Bearing cover	6634S014	1
15	Screw M5x10	80201138	3
16	Spacer	6634S016	1
17	Woodruff key 4x5	66637014	1
18	Bevel gear	6634S018	1
19	Retaining ring 15x1	80201322	1
20	Needle sleeve 101610	6634S020	1
21	Lock washer 6	80201504	1
22	Screw 5x35	80201456	4
23	Gearbox housing	6634S023	1
24	Locking knob	6634S024	1
25	Pressure spring	6634S025	1
27	Nut M8x1	6634S027	1
28	Bevel pinion	6634S028	1
29	Grooved ball bearing 6201 2RSL	80410103	1
30	Bearing cover	6634S030	1
31	Spring lock washer 4	80201301	4
32	Screw M4x12	80201515	4
34	Rotor, compl.	6634S034	1
36	Air guiding ring	6634S036	1
37	Grooved ball bearing 629 2RS	6634S037	1
38	Screw 4,8x80	80201297	2
39	Stator, compl.	6634S039	1
40	Bearing cap	6634S040	1
42	Motor housing	6634S042	1
43	Washer 4,3	80201371	4
44	Screw 3,9x9,5	80201260	6
45	Brush holder cover 1	6634S045	1
46	Carbon brush	6634S046	2
48	Brush holder	6634S048	2

Pos.	Description	Item No.	pc.
49	Spring	6634S049	2
50	Brush holder cover 2	6634S050	1
51	Intermediate ring	6634S051	1
52	Compression spring	6634S052	1
53	Lever	6634S053	1
54	Initial current limiter	6634S054	1
55	Pair of handle halves	6634S055	1
56	Screw 3,9x16	80201115	5
58	Wire locking flange	6634S058	1
59	Switch	6634S059	1
60	Cable grommet	6634S060	1
61	Connecting cable 2x1,5mm ² 5m	80600403	1
63	Face spanner	6634S063	1
64	Screw M5x40	80201207	4
65	Wing screw M4x10	80201407	2
66	Snap bolt M8	80110101	1
67	Screw M14x20	80201561	2
68	Spring lock washer 14	80201562	2
69	Bow handle	7634S590	1