


AGT 3500i-ER
INVERTER GENERATOR
Owner's Manual

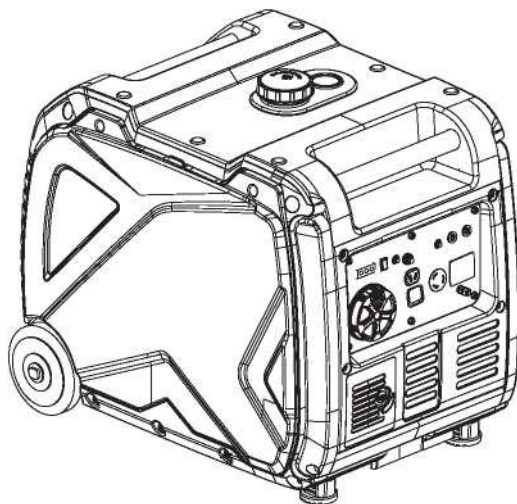

ORIGINAL INSTRUCTIONS

Thank you for choosing a silent gasoline engine generator set of our company.

This manual contains the information on how to do that. Please read it carefully before operating. Operating safely and correctly can help you get the best results.

All informations in this publication is based on the latest product information available at the time of printing. This contents in this manual may be different from the actual parts due to revision and other changes.

Our company reserves the right to make changes at any time without notice and without incurring any obligation. No part of this publication may be reproduced without our company's written permission.

This manual should be considered a permanent part of the generator and should accompany the generator if it is resold.

SAFETY WARNINGS

Personal safety and property safety of you and others are very important. .

Please read these messages which is preceded by a symbol or **NOTICE** carefully.

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION

You **CAN** be **HURT** if you don't follow instructions.

NOTICE

Your generator or other property could be damaged if you don't follow instructions.

CONTENTS

SAFETY WARNINGS	2
1. SAFETY INFORMATION.....	4
2. DESCRIPTION	8
3. CONTROL FUNCTION.....	10
4. PREPARATION	14
5. OPERATION.....	17
6. MAINTENANCE	23
7. STORAGE	30
8. TROUBLESHOOTING.....	32
9. SPECIFICATIONS.....	33
10. WIRING DIAGRAM.....	34
11. HOWTOCONNECTTHEBATTERY	36

1. SAFETY INFORMATION


Read and understand this owner's manual before operating your generator. It will help you avoid accidents if you get familiar with your generator's safe operation procedures.




Never use it indoors



Never use it in a wet condition

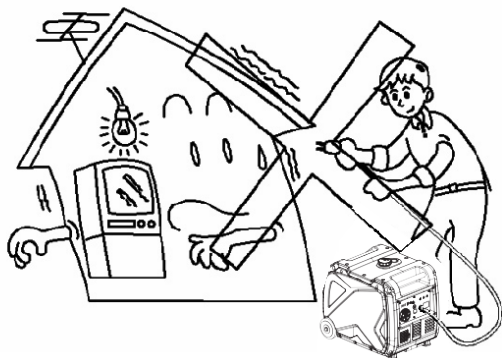

Never directly connect it to a home power system

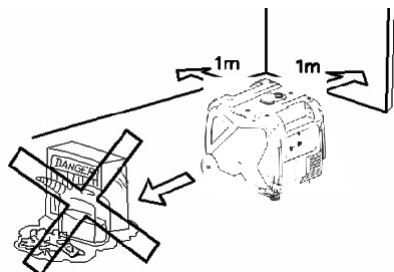

Keep it at least 1m away from
inflammables



Never smoke when fueling



Don't spill when fueling




Stop the engine before fueling

Connections to a Home Power Supply

NOTICE


If the generator is to be connected to a home power supply as a standby, connection shall be performed by a professional electrician or by another person with proficient electrical skill.

When the loads are connected to the generator, please carefully check whether electrical connections are safe and reliable. Any improper connection may cause damage to the generator, or cause a fire.

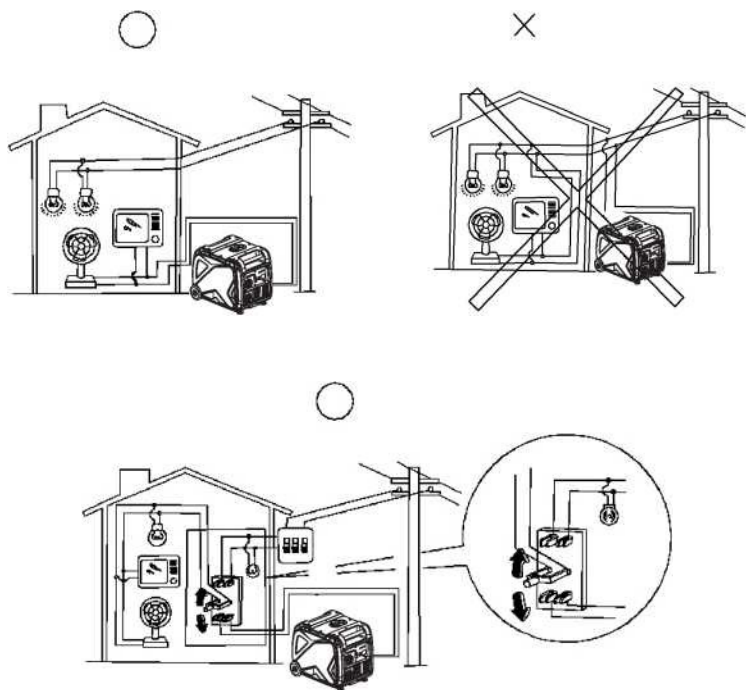

Generator Ground Circuit

In order to prevent electric shock due to shoddy electrical appliances or wrong use of electricity, the generator must be grounded with a good-quality insulated conductor.

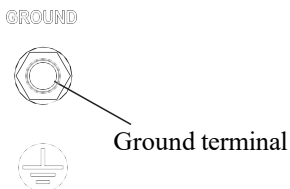


NOTICE

Make sure the control panel, louver and the inverter bottom side cooling well and without chips, mud and water come in. it may damage the engine, inverter or alternator if the cooling vent blocked.

Do not mix the generator with other stuff If moving, storing or running the unit. It may cause the generator damage or bring property safety issue when the generator in leakage.

2. DISCRPTION


2.1 Control panel

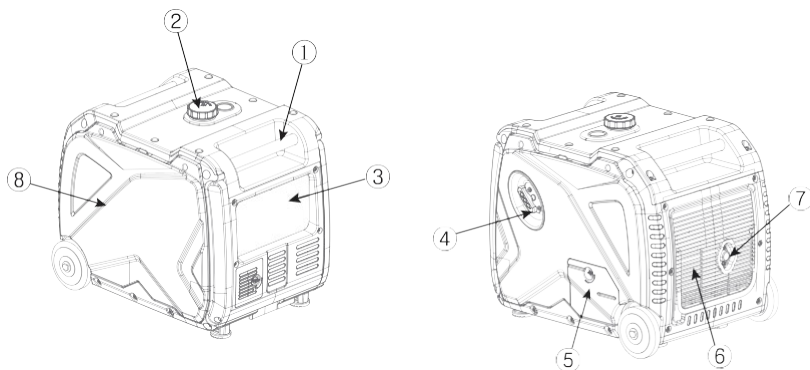


- ① Carrying handle
- ② Fuel tank cap
- ③ Control panel
- ④ Recoil starter
- ⑤ Oil filler cap
- ⑥ Louver
- ⑦ Muffler
- ⑧ Spark plug maintenance cover

2.2 Control panel

Recoil

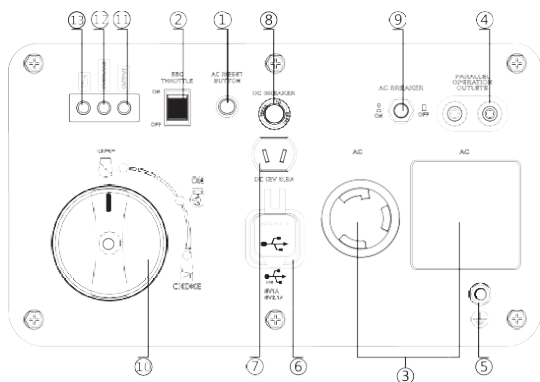


Electric

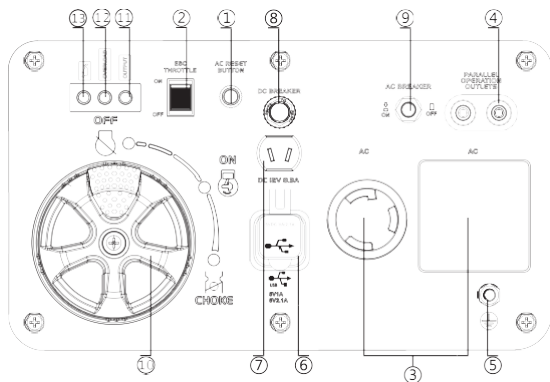

- | | |
|-----------------------------|-------------------------------|
| ① AC reset | ⑧ DC protector |
| ② ESC(Engine Smart Control) | ⑨ AC Breaker |
| ③ AC receptacle | (10) Switch knob |
| ④ Parallel function | (12) Overload indicator light |
| ⑤ Ground (earth) terminal | |
| (11) AC pilot light | |
| ⑬ Oil warning light | |
| ⑥ USB | |
| ⑦ DC receptacle | |

3. CONTROL FUNCTION

3.1 Switch knob

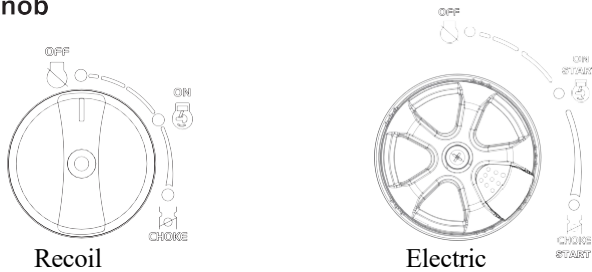


- ① Engine switch \fuel valve "OFF";
Ignition circuit is switched off. Fuel is switched off.
The engine will not run.
- ② Engine switch \fuel valve \choke "ON";
Ignition circuit is switched on. Fuel is switched on. Choke is switched on.
The engine can be running.
- ③ Engine switch \fuel valve \choke "CHOKE";
Ignition circuit is switched on. Fuel is switched on. Choke is switched off.
The engine can be start.

TIP: The choke is not required to start a warm engine.

3.2 Recoil light

1. Oil warning light (red)

When the oil level falls below the lower level, the oil warning light ③ comes on and then the engine stops automatically. Unless you refill with oil, the engine will not start again.

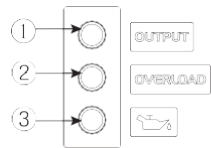

Tip: If the engine stalls or does not start, turn the engine switch to "ON" and then pull the recoil starter.

If the oil warning light flickers for a few seconds, the engine oil is insufficient. Add oil and restart.

2. Overload indicator light (Red)

The overload indicator light ② comes on when an overload of a connected electrical device is detected, the inverter control unit overheats, or the AC output voltage rises. Then, the AC protector will trip, stopping power generation in order to protect the generator and any connected electric devices. The AC pilot light (Green) will go off and the overload indicator light (Red) will stay on, but the engine will not stop running.

When the overload indicator light comes on and power generation stops, proceed as follows:

1. Turn off any connected electric devices and stop the engine.
2. Reduce the total wattage of connected electric devices within the rated output.
3. Check for blockages in the cooling air inlet and around the control unit.
If any blockages are found, remove.
4. After checking, restart the engine.


Tip: The overload indicator light may come on for a few seconds at first when using electric devices that require a large starting current, such as a compressor or a submergible pump. However, this is not a malfunction.

3. AC pilot light (Green)

The AC pilot light ① comes on when the engine starts and produces power.

3.3 DC protector

The DC protector turns to “OFF” automatically when electric device being connected to the generator is operating and current above the rated flows. To use this equipment again, turn on DC protector by pressing its button to “ON”

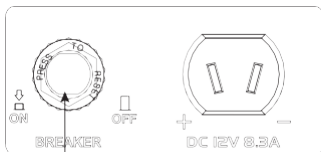


DC protector

“ON” Direct current is output. “OFF” Direct current is not output.

⚠ CAUTION

Reduce the load of the connected electric device below the specified rated output of the generator if the DC protector turns off. If the DC protector turns off again, stop using the device immediately and consult our company authorized dealer.

3.4 Engine smart control (ESC)

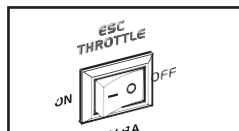

① “ON”

When the ESC switch is turned to "ON", the economy control unit controls the engine speed according to the connected load. The results are better fuel consumption and less noise.

② “OFF”

When the ESC switch is turned to "OFF", the engine runs at the rated r/min(4500r/min) regard-less of whether is a load connected or not.

Tip:

The ESC must be turned to "OFF" when using electric devices that require a large starting current, such as a compressor or a submersible pump.

3.5 Ground (Earth) terminal

Ground (Earth) terminal connects the earth line for prevention of electric shock. When the electric device is earthed, always the generator must be earthed.

GROUND




Optional configuration

PARALLEL CONNECTIONS

The parallel connection function allows two units to be connected in parallel to boost output. The Parallel connection cord is sold separately and includes operation and safety instructions for use.

PARALLEL
OPERATION
OUTLETS




4. PREPARATION

4.1 Fuel



- Fuel is highly flammable and poisonous. Check "SAFETY INFORMATION" carefully before filling.
- Do not overfill the fuel tank, otherwise it may overflow when the fuel warms up and expands.
- After fill the fuel, make sure the fuel tank cap is tightened securely.

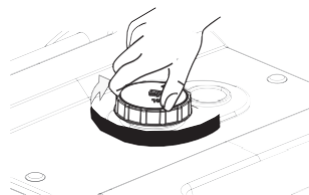


- Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.
- Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts.

Remove the fuel tank cap and fill the fuel into the tank up to the red level ①,

Recommended fuel: Unleaded gasoline

Fuel tank capacity:

Total: 8.3 L

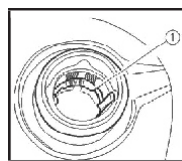


- When the fuel filter screen is not marked, the volume of the oil level distance from the lip of the oil tank at the 25.4mm of the oil tank is nominal;
- When the fuel filter is marked, the volume of the fuel is added to the mark.

4.2 Engine oil

NOTICE

The generator has been shipped without engine oil. Do not start the engine till fill with the sufficient engine oil.

1. Place the generator on a level surface.
2. Screw the oil service door knob to "OPEN" and remove the oil service door.
3. Screw-out the oil plug, then screw-in sealing plug into the pouring orifice, and use the funnel to add the specified amount of oil.
4. Screw the oil plug, installed oil service door and keep the knob to "CLOSE".

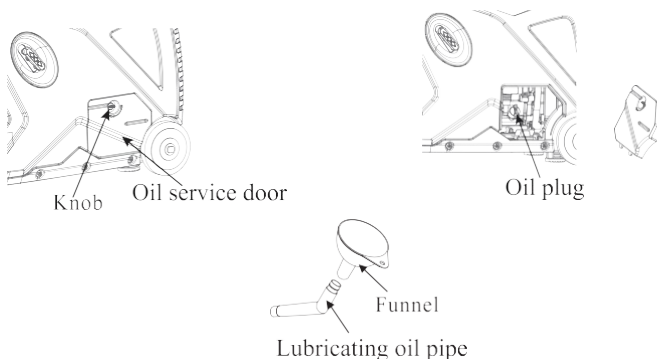

Recommended engine oil: SAE SJ 15W-40

Recommended engine oil grade: API Service SE type or higher

Engine oil quantity: 0.5 L

4.3 PRE-OPERATION CHECK

WARNING

If any item in the Pre-operation check is not working properly, have it inspected and repaired before operating the generator.

The condition of a generator is the owner's responsibility. Vital components can start to deteriorate quickly and unexpectedly, even if the generator unused.

TIP: Pre-operation checks should be made each time the generator is used.

Pre-operation check

Fuel (See page 14)

- Check fuel level in fuel tank.
- Refuel if necessary.

Engine oil (See page 15)

- Check oil level in engine.
- If necessary, add recommended oil to specified level.
- Check generator for oil leakage.

The point where abnormality was recognized by use

- Check operation.
- If necessary, add recommended oil to specified level.
- If necessary, consult our company authorized dealer.

5. OPERATION

⚠ WARNING

- Never operate the engine in a closed area or it may cause unconsciousness and death within a short time. Operate the engine in a well ventilated area.
- Before starting the engine, do not connect any electric devices.

NOTICE

- The generator has been shipped without engine oil. Do not start the engine till fill with the sufficient engine oil.
- Do not tilt the generator when adding engine oil. This could result in

overfilling and damage to the engine.

TIP:

The generator can be used with the rated output load at standard atmospheric conditions.

"Standard atmospheric conditions "

Ambient temperature 25 °C

Barometric pressure 100kPa


Relative humidity 30%

The output of the generator varies due to change temperature, altitude (lower air pressure at higher altitude) and humidity.

The output of the generator is reduced when the temperature, the humidity and the altitude are higher than standard atmospheric conditions. Additionally, the load must be reduced when using in a confined areas, as generator cooling is affected.

5.1 Starting the engine

1. Turn the ESC switch to “OFF”.




2. Turn the switch knob

(Recoil)

Turn the switch knob to "CHOKE".

- a. Ignition circuit is switched on.
- b. Fuel is switched on.
- c. chock is switched off

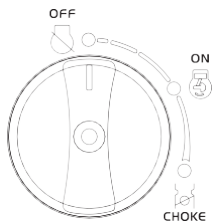


Recoil

TIP: The choke is not required to start a warm engine. Push the choke knob in to the position "ON".

(Electric)

Turn the switch to “CHOKE”.

- a. Ignition circuit is switched on.
- b. Fuel is switched on.
- c. Chock is switched off.
- d. Press the electric start switch as shown in the figure.

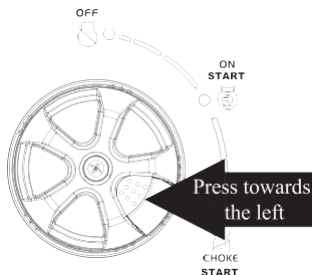


Electric

TIP: The choke is not required to start a warm engine. Push the choke knob in to the position "ON". Press the electric start switch as shown in the figure.

4. Pull slowly on the recoil starter until it is engaged, then pull it briskly.

TIP: Grasp the carrying handle firmly to prevent the generator from falling over when pulling the recoil starter.

5. After the engine starts, warm up the engine until the engine does not stop when the choke knob is returned to the "ON" position.

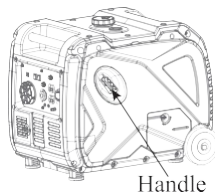

TIP: When starting the engine, with the ESC "ON", and there is no load on the generator:

5.2 Stopping the engine

TIP: Turn off any electric devices.

1. Turn the ESC to "OFF".
2. Disconnect any electric devices.
3. Turn the switch knob to "OFF".
 - a. Ignition circuit is switched off.
 - b. Fuel is switched ofC

5.3 Alternating Current (AC) connection

- Be sure all electric devices including the lines and plug connections are in good condition before connection to the generator.
- Be sure the total load is within generator rated output.
- Be sure the receptacle load current is within receptacle rated current.

TIP: Make sure to ground (Earth) the generator. When the electric device is earthed, always the generator must be earthed.


1. Start the engine.
2. Turn the ESC to "ON".
3. Plug in to AC receptacle.
4. Make sure the AC pilot light is on.
5. Turn on any electric devices.

TIP: The ESC must be turned to "OFF" to increase engine speed to rated rpm. If the generator is connected to multiple loads or electricity consumers, please remember to first connect the one with the highest starting current. and last connect the one with the lowest starting current.

5.4 Battery Charging




TIP:

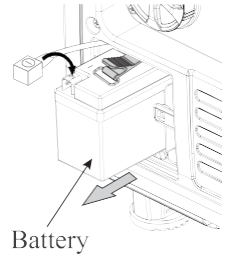- The generator DC rated voltage is 12V
- Pls. connect the negative (-) pole of battery **firstly**, then start the generator, battery can be charged by **itself**.



5.5 Application range

When using the generator, make sure the total load is within rated output of a generator. Otherwise, generator damage may occur.

AC			
Power factor	1	0.8-0.95	0.4-0.75 (Efficiency 0.85)
Rated output power	≤3,500W	≤2,800W	≤1190W


TIP:

- Application wattage indicates when each device is used by itself.
- The simultaneous usage of AC and DC power is possible but total wattage should not exceed the rated output.

EX:

Generator rated output		3,200W
Frequency	Power factor	
AC	1.0	≤ 3,500W
DC	---	100W (12V/8.3A)

- The overload indicator light comes on when total wattage exceeds the application range.

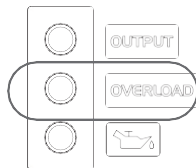

NOTICE

- Do not overload. The total load of all electrical appliances appliance must

not exceed the supply range of the generator. Overloading will damage the generator.

- When supplying precision equipment, electronic controllers, PCs, Electronic computers, microcomputer based equipment or battery chargers, keep the generator a sufficient distance away to prevent electrical interference from the engine. Also ensure that electrical noise from the engine does not interfere with any other electrical devices located near the generator.
- If the generator is to supply medical equipment, advice should first be obtained from the manufacturer, a medical professional or hospital.
- Some electrical appliances or general-purpose electric motors have High starting currents, and cannot therefore be used, even if they lie within the supply ranges given in the above table. Consult the equipment manufacturer for further advice.

6. MAINTENANCE

The engine must be properly maintained to ensure its operation be safe, economy and trouble-free, as well as eco-friendly.

In order to keep your gasoline engine in good working condition, it must be periodically serviced. The following maintenance schedule and routine inspection procedures must be carefully followed:

Items	Frequency	Each time	First 1 month or first 20hrs of operation	Thereafter, every 3 months or every 50hrs of operation	Every year or every 100 hrs of operation
Engine oil	Check-Refill	✓			
	Replace		✓	✓	
Reduction gear oil(if equipped)	Oil level check	✓			
	Replace		✓	✓	
Air filter element	Check	✓			
	Clean		✓		
	Replace			✓	
Deposit Cup (if equipped)	Clean				✓
Spark Plug	Check-adjust				✓
	Replace	Every year or 250 hrs of operation			
Spark arrester	Clean			✓	
Idling (if equipped)*	Check-adjust				✓
Valve clearan- -ce *	Check-adjust				✓
Fuel tank & fuel filter *	Clean				✓
Fuel line	Check	Every 2 years(change if necessary)			
Cylinder head, piston	Clean up carb- -on *	$< 225\text{cc}$, Every 125hrs $\geq 225\text{cc}$, Every 250hrs			

* These items should be maintained and repaired by our authorized dealer, unless the owner has appropriate tools and is proficient with mechanical maintenance.

NOTICE

- If the gasoline engine frequently works under high temperature or heavy load, change the oil every 25 hours.
- If the engine frequently work under dusty or other severe circumstances, clean the air filter element every 10 hours; If necessary, change the air filter element every 25 hours.
- The maintenance period and the exact time (hour), the one which comes first should govern.
- If you have missed the scheduled time to maintain your engine, do it as soon as possible.

WARNING


Stop the engine before servicing. Put the engine on a level surface and remove the spark plug cap to prevent the engine from starting.

Do not operate the engine in a poorly ventilated room or other enclosed area. Be sure to keep good ventilation in working area. The exhaust from the engine may contain poisonous CO, inhalation can cause shock, unconsciousness and even death.

6.1 Spark plug inspection

The spark plug is important engine components, which should be checked periodically.


1. Remove the cover ① and the spark plug cap (2), and Insert the tool ④ through the hole from the outside of the cover.

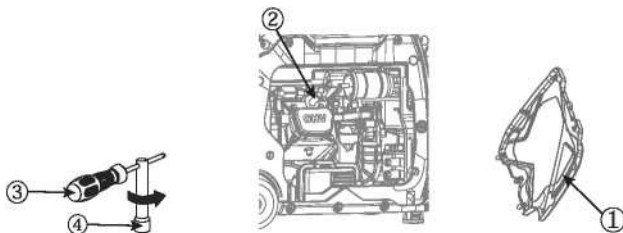

2. Insert the handlebar ③ into the tool ④ and turn it counterclockwise to remove the spark plug.
3. Check for discoloration and remove the carbon. The porcelain insulator around the center electrode of spark plug should be a medium-to-light tan color.
4. Check the spark plug type and gap.

Standard Spark Plug: F6RTC

Spark Plug Gap: 0.7-0.8mm

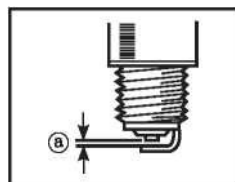

TIP: The spark plug gap should be measured with a wire thickness gauge and, if necessary, adjusted to specification.

5. Install the spark plug.

Spark Plug Torque: 28 N.m

TIP: If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4-1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

6. Install the spark plug cap and spark plug cover.

6.2 Carburetor adjustment



The carburetor is a vital part of the engine. Adjusting should be left to our company authorized dealer with the professional knowledge, specialized date, and equipment to do so properly.

6.3 Engine oil replacement (refer to 4.2)



Avoid draining the engine oil immediately after stopping the engine. The oil is hot and should be handled with care to avoid burns.

1. Place the generator on a level surface and warm up the engine for several minutes. The stop the engine and turn the 3 in 1 switch knob, fuel tank cap air vent knob to "OFF".
2. Remove the screws and then remove the cover.
3. Remove the oil filler cap .
4. Place an oil pan under the engine. Tilt the generator to drain the oil completely.
5. Replace the generator on a level surface.

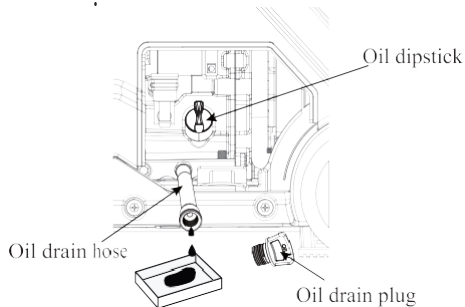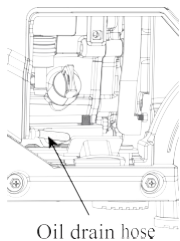

Do not tilt the generator when adding engine oil. This could result in overfilling and damage to the engine.

6. Add engine oil to the upper level.

Recommended engine oil: SAE SJ 15W-40

Recommended oil grade: API Service type SE or higher

Engine oil capacity: 0.5 L

7. Wipe the cap and wipe the spilled oil.


NOTICE

Be sure no foreign material enters the crankcase.

8. Install the oil filler cap.
9. Install the cover and tighten the screws.

6.4 Air filter

1. Remove the screws ①, and then remove the cover ②.
2. Remove the air filter case cover

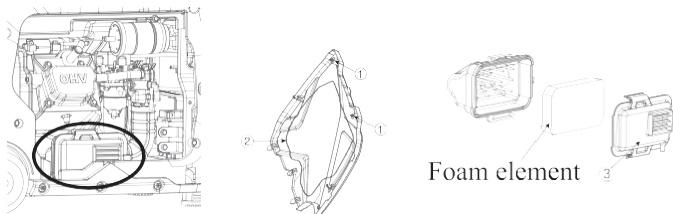

3. Remove the foam element.
4. Wash the fbam element in solvent and dry it.
5. Oil the foam element and squeeze out excess oil.

The foam element should be wet but not dripping.

Foam element



NOTICE

Do not wring out the foam element when squeezing it. This could cause it to tear.

6. Insert the foam element into the air filter case.

TIP: Be sure the foam element sealing surface matcher the air filter so there is no air leak.

The engine should never run without the foam element; excessive piston and cylinder wear may result.


7. Install the air filter case cover in its original position and tighten the screw.
8. Install the cover (2) and lock it.

6.5 Muffler screen and spark arrester

⚠ WARNING

The engine and muffler will be very hot after the engine has been run. Avoid touching the engine and muffler while they are still hot with any part of your body or clothing during inspection or repair.

1. Remove the screws (1),
2. Remove the muffler cap (2), the muffler screen (3) and spark arrester (4).
3. Clean the carbon deposits on the muffler screen and spark arrester using a wire brush.

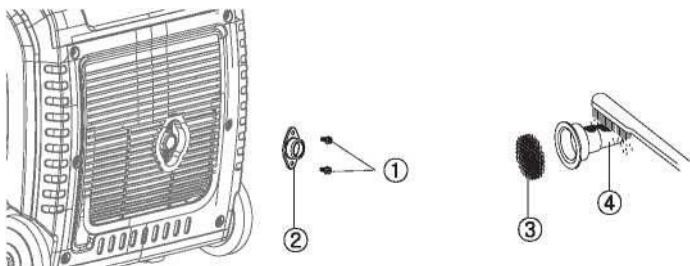

NOTICE

When cleaning, use the wire brush lightly to avoid damaging or scratching of muffler screen and spark arrester.

4. Check the muffler screen and spark arrester. Replace them if damaged.
5. Install the spark arrester.

TIP: Align the spark arrester projection with the hole in the muffler pipe.

6. Install the muffler screen and the muffler cap.
7. Install the cover and tighten the screws.


6.6 Fuel tank filter



Never use the gasoline while smoking or in the vicinity of an open flame.

1. Remove the fuel tank cap and filter.
2. Clean the filter with gasoline.
3. Wipe the filter and install it.
4. Install the fuel tank cap.

Be sure the fuel tank cap is tightened securely.

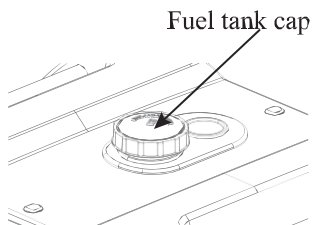

7. STORAGE

Long term storage of your machine will require some preventive procedures to guard against deterioration.

7.1 Drain the fuel

1. Turn the switch knob to "OFF" .
2. Remove the fuel tank cap, remove the filter . Extract the fuel from the fuel tank into an approved gasoline container. Then, install the fuel tank cap.



Fuel is highly flammable and poisonous. Check "SAFETY INFORMATION" (See page 4) carefully.

NOTICE

Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.

3. Start the engine (See Page 18) and leave it run until it stops. The engine stops in approx. 20 minutes. Time by running out of fuel

TIP:

- Do not connect with any electrical devices, (unloaded operation)
 - Duration of the running engine depends on the amount of the fuel left in the tank.
4. Remove the screws, and then remove the cover.
 5. Drain the fuel from the carburetor by loosening the drain screw on the carburetor float chamber.
 6. Turn the 3 in 1 switch to "OFF".
 7. Tighten the drain screw.
 8. Install the cover and tighten the screws.

9. Turn the fuel tank cap air vent knob to "OFF" after the engine has completely cools down.

7.2 Engine

Perform the following steps to protect the cylinder, piston ring, etc. from corrosion.

1. Remove the spark plug, pour about one table- spoon of SAE 15W-40 into the spark plug hole and reinstall the spark plug. Recoil start the engine by turning over several times (with 3 in 1 switch knob off) to coat the cylinder walls with oil.
2. Pull the recoil starter until you feel compression. Then stop pulling. (This prevents the cylinder and valves from rusting).
3. Clean exterior of the generator. Store the generator in a dry, well-ventilated place, with the cover placed over it.

8. TROUBLESHOOTING

8.1 Engine won't start

1. Fuel systems

No fuel supplied to combustion chamber.

O No fuel in tank...Supply fuel.

O Fuel in tank. .. Fuel tank cap air vent knob and fuel cock knob to "ON"


O Clogged fuel filter.....Clean fuel filter.

O Clogged carburetor Clean carburetor.

2. Engine oil system

Insufficient

O Oil level is low.....Add engine oil.

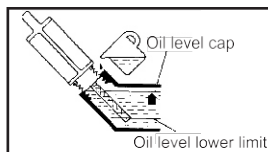

3. Electrical systems

O Put the 1 in 3 switch to "CHOKE" and pull the recoil starter.....Poor spark.

O Spark plug dirty with carbon or wet.... Remove carbon or wipe spark plug dry.

O Faulty ignition system consult our company authorized dealer.

8.2 Generator won't produce power

O Safety device (DC protector) to "OFF" Press the DC protector to "ON".


O The AC pilot light (Green) go off Stop the engine, then restart.

9. SPECIFICATIONS


	Model	AGT 3500i-ER	
Generator	Type	Inverter	
	Rated frequency (Hz)	50	
	Rated voltage (V)	230	
	Rated output power (kW)	3.2	
	Power factor	1	
	AC output quality	ISO8528 G2	
	Charging Voltage (DC) (V)	12	
	Charging Current (DC) (A)	8.3	
	Overload Protect (DC)	Non-fuse Protector	
Engine	Engine	R210(D)-Vi	
	Engine type	Single cylinder, 4-Stroke, forced air cooling, OHV	
	Displacement (cc)	212	
	Fuel type	Unleaded Gasoline	
	Fuel tank capacity (L)	8.3	
	Oil Capacity (L)	0.5	
	Spark Model No.	F6RTC	
	Starting mode	Recoil	Electric
Generator set	Lengthx WidthxHeight (mm)	590x456x511	
	Net weight (kg)	43.5	45

10. WIRING DIAGRAM



Recoil

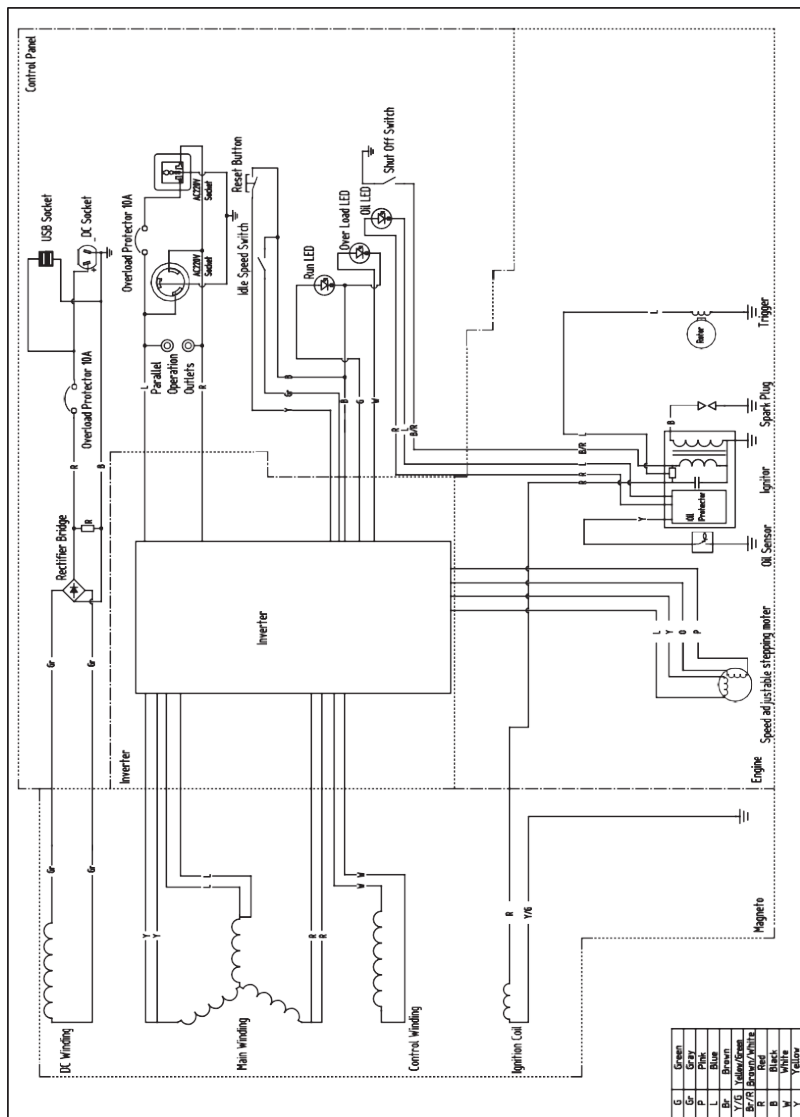

Electric

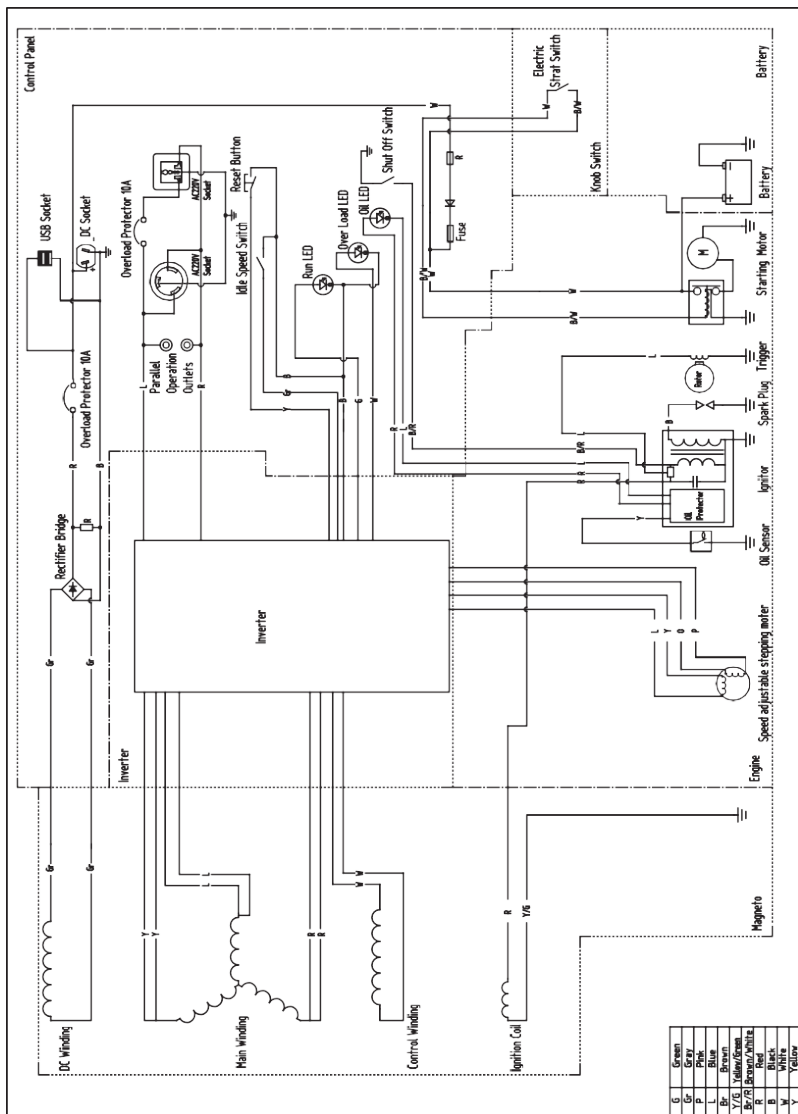

11. HOW TO CONNECT THE BATTERY

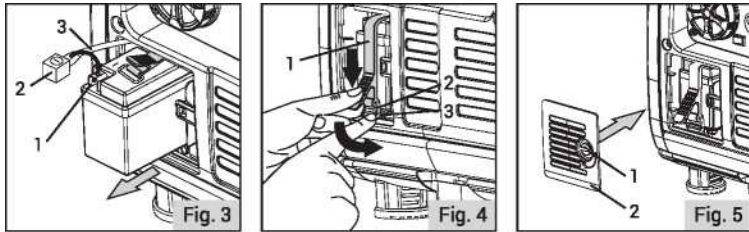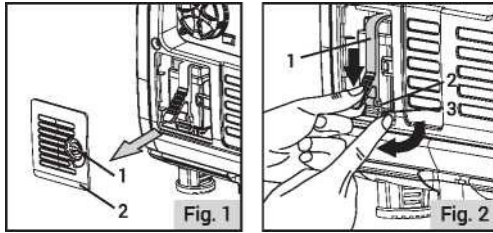

TO CONNECT THE BATTERY:

1. Using a coin or flat-head screwdriver (not included), turn the screw (Fig. 1 -1) on the battery access cover (Fig. 1 -2) and remove the cover.
2. Pull downwards on the rubber belt (Fig. 2-1). With your other hand, free the metal buckle (Fig. 2 -2) from the hook (Fig. 2 -3) beneath the battery.
3. Pull the battery outwards until the negative terminal (Fig. 3-1) is accessible. Pull back the cover (Fig. 3-2) from the black cable (Fig. 3 -3). Connect the black cable onto the battery's negative terminal and replace the cover.

NOTE: The generator's positive terminal has already been connected. Double check that the positive terminal's connection is secure.

4. Slide the battery back into the generator. Pull downwards on the rubber belt (Fig. 4-1). With your other hand, latch the metal buckle (Fig. 4 -2) onto the hook (Fig. 4 -3) beneath the battery.
5. Reinstall the battery access cover (Fig. 5 -2) using a coin or flat-head screwdriver (not included) to turn the screw (Fig. 5-1).

IMPORTANT: If you do not plan to use the generator for an extended period of time, we recommend **DISCONNECTING** the negative battery cable from the battery. This will protect the battery from losing its charge. After disconnecting the negative cable, cover the free end of the cable with an insulator such as electrical tape. Alternatively you can use a trickle charger (not included) to maintain battery charge.



EC DECLARATION OF CONFORMITY



Manufacturer: S.C. AGENT TRADE S.R.L

Address: Soseaua de Centura nr. 32, 077180 TUNARI, Ilfov, ROMANIA

Equipment description:

Type:	Generating set
Model:	AGT 3500i-ER
Power:	3.5 kW
Voltage:	230V / 50 Hz
Serial number:	A2201000001 ~ A2212999999

The manufacturer hereby declares that this equipment complies with the following directives and standards:

2006/42/EC
2014/30/EU
2000/14/EC
(EU) 2016/1628
2014/35/EU
EN ISO 8528-13:2016
EN ISO 60204-1: 2009/AC:2010
EN 55012:2007+A1, EN 61000-6-1:2007

Measured power level noise: 93dB(A)

Guaranteed power level noise: 95dB(A)

Location / date:

Authorized person:

Tunari, 11.01.2022
Technical Manager AGT,
Sorin Oprea



93004-YBW0210-0000